

7. Configuring using barcodes

7.1. Start, Save & Exit

Setup Start



Default



Save & Exit



Setup Cancel



7.2. Communications

Baud rate setting

Baud Rate Setting controls the speed at which a message string is transmitted via RS-232 between The CSE-6000 and a host computer. The higher the baud rate, the faster the transmission.

1,200bps



2,400bps



4,800bps



9,600bps



19,200bps



38,400bps



57,600bps



115,200bps (Default)



460,800bps



7.7. LED control

RGB LED control

Disable Red LED



Enable Red LED (Default)



Disable Green LED (Default)



Enable Green LED



Disable Blue LED (Default)



Enable Blue LED



RGB LED flashing control

Disable auto-RGB flashing (Default)



Enable auto-RGB flashing

