


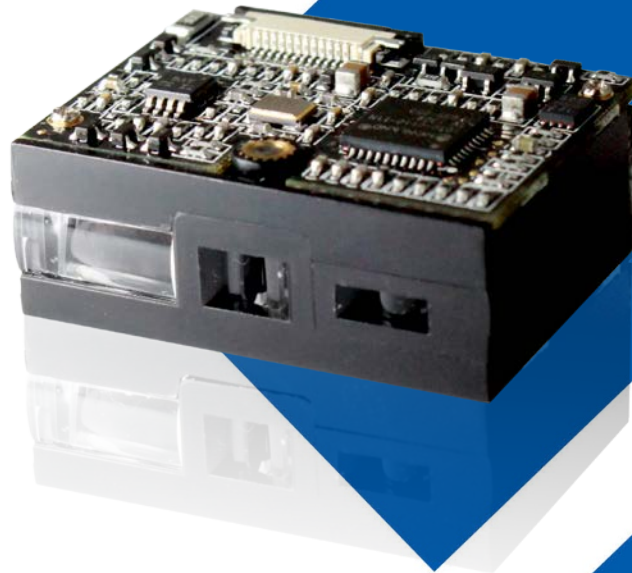

NLS-EM1365-LD

OEM Scan Engine

User Guide



Disclaimer

© 2014 Fujian Newland Auto-ID Tech. Co., Ltd. All rights reserved.

Please read through the manual carefully before using the product and operate it according to the manual. It is advised that you should keep this manual for future reference.

Do not disassemble the device or remove the seal label from the device. Otherwise, Fujian Newland Auto-ID Tech. Co., Ltd. does not assume responsibility for the warranty or replacement.

All pictures in this manual are for reference only and actual product may differ. Regarding to the product modification and update, Fujian Newland Auto-ID Tech. Co., Ltd. reserves the right to make changes to any software or product to improve reliability, function, or design at any time without notice. Besides, the information contained herein is subject to change without prior notice.

The products depicted in this manual may include software copyrighted by Fujian Newland Auto-ID Tech. Co., Ltd or a third party. The user, corporation or individual, shall not duplicate, in whole or in part, distribute, modify, decompile, disassemble, decode, reverse engineer, rent, transfer or sublicense such software without prior written consent from the copyright holders.

This manual is copyrighted. No part of this publication may be reproduced, distributed or used in any form without written permission from Newland.

Fujian Newland Auto-ID Tech. Co., Ltd. reserves the right to make final interpretation of the statement above.

Fujian Newland Auto-ID Tech. Co., Ltd.

3F, Building A, No.1, Rujiang Xi Rd., Mawei, Fuzhou, Fujian, P.R. China. 350015.

<http://www.nlscan.com>

Revision History

Version	Description	Date
V1.0.0	Initial release.	April 9, 2014

Table of Contents

Revision History	3
Chapter 1 Getting Started.....	1
Introduction	1
About This Guide	2
Connecting EVK and PC	2
Barcode Scanning	2
Configuring the EM1365-LD	2
Command Programming	2
Read Register.....	2
Write Register.....	6
Enable/Disable EEPROM Write	9
Write EEPROM.....	11
Read EEPROM	14
Registers	17
Barcode Programming.....	34
Enter/Exit Setup.....	34
Programming Barcode Data.....	34
Factory Defaults	34
Chapter 2 Scan Mode.....	36
Manual Mode	36
Continuous Mode.....	37
Sense Mode.....	40
Command Trigger Mode.....	44
Chapter 3 Notification	45
Good Read Beep	45
Decode Result Notification	46
Other Settings.....	47
Silent Mode	47
Illumination.....	47
Chapter 4 Communication Settings	48
TTL-232 Interface	49

Baud Rate	49
Parity Check	50
Stop Bit	50
Data Bit	51
USB Interface	53
USB HID-KBW	53
Standard Keyboard	54
Emulate ALT+Keypad	54
Function Key Mapping.....	55
ASCII Function Key Mapping Table.....	56
USB Country Keyboard Types.....	57
Inter-Keystroke Delay.....	60
Convert Case.....	61
Emulate Numeric Keypad.....	62
USB DataPipe.....	63
USB COM Port Emulation	63
HID-POS	64
Access the Engine with Your Program	65
Acquire Scanned Data	65
VID/PID.....	65
Chapter 5 Data Formatting	66
Introduction	66
Prefix Sequence	67
Custom Prefix	68
Enable/Disable Custom Prefix.....	68
Set Custom Prefix.....	68
AIM ID Prefix.....	69
CODE ID Prefix.....	70
Restore All Default Code IDs.....	70
Set Code ID	70
Custom Suffix	74
Enable/Disable Custom Suffix.....	74
Set Custom Suffix.....	75
Terminating Character Suffix.....	76
Enable/Disable Terminating Character Suffix	76
Set Terminating Character Suffix	77

Chapter 7 Symbologies	78
Introduction	78
Global Settings	78
Enable/Disable All Symbologies.....	78
Code 128	79
Restore Factory Defaults.....	79
Enable/Disable Code 128.....	79
Set Length Range for Code 128.....	80
UCC/EAN-128	81
Restore Factory Defaults.....	81
Enable/Disable UCC/EAN-128.....	81
Set Length Range for UCC/EAN-128.....	82
AIM 128.....	83
Restore Factory Defaults.....	83
Enable/Disable AIM 128.....	83
Set Length Range for AIM 128.....	84
EAN-8	85
Restore Factory Defaults.....	85
Enable/Disable EAN-8.....	85
Transmit Check Digit	85
Add-On Code.....	86
Add-On Code Required	88
EAN-8 Extension	88
EAN-13	89
Restore Factory Defaults.....	89
Enable/Disable EAN-13.....	89
Transmit Check Digit	89
Add-On Code.....	90
Add-On Code Required	92
ISSN.....	93
Restore Factory Defaults.....	93
Enable/Disable ISSN	93
ISBN.....	94
Restore Factory Defaults.....	94
Enable/Disable ISBN	94
Set ISBN Format.....	95

UPC-E.....	96
Restore Factory Defaults.....	96
Enable/Disable UPC-E	96
Transmit Check Digit	96
Add-On Code.....	97
Add-On Code Required.....	99
Transmit System Character.....	99
UPC-E Extension.....	100
UPC-A.....	101
Restore Factory Defaults.....	101
Enable/Disable UPC-A	101
Transmit Check Digit	102
Transmit Preamble Character	102
Add-On Code.....	103
Add-On Code Required.....	105
Interleaved 2 of 5.....	106
Restore Factory Defaults.....	106
Enable/Disable Interleaved 2 of 5	106
Check Digit Verification	107
Set Length Range for Interleaved 2 of 5	108
ITF-6	109
Restore Factory Defaults.....	109
Enable/Disable ITF-6.....	109
ITF-14	109
Restore Factory Defaults.....	109
Enable/Disable ITF-14.....	110
Deutsche 14.....	110
Restore Factory Defaults.....	110
Enable/Disable Deutsche 14	110
Deutsche 12.....	111
Restore Factory Defaults.....	111
Enable/Disable Deutsche 12	111
Matrix 2 of 5 (European Matrix 2 of 5).....	112
Restore Factory Defaults.....	112
Enable/Disable Matrix 2 of 5.....	112
Check Digit Verification	113
Set Length Range for Matrix 2 of 5	114

Industrial 25	115
Restore Factory Defaults	115
Enable/Disable Industrial 25	115
Check Digit Verification	116
Set Length Range for Industrial 25.....	117
Standard 25	118
Restore Factory Defaults.....	118
Enable/Disable Standard 25.....	118
Check Digit Verification	119
Set Length Range for Standard 25.....	120
Code 39	121
Restore Factory Defaults.....	121
Enable/Disable Code 39.....	121
Check Digit Verification	122
Transmit Start/Stop Characters	123
Enable/Disable Code 39 Full ASCII	123
Set Length Range for Code 39.....	124
Codabar	125
Restore Factory Defaults.....	125
Enable/Disable Codabar.....	125
Check Digit Verification	126
Start/Stop Characters	127
Set Length Range for Codabar	128
Code 93	129
Restore Factory Defaults.....	129
Enable/Disable Code 93.....	129
Check Digit Verification	130
Set Length Range for Code 93.....	131
Code 11	132
Restore Factory Defaults.....	132
Enable/Disable Code 11	132
Check Digit Verification	133
Set Length Range for Code 11.....	134
Plessey	135
Restore Factory Defaults.....	135
Enable/Disable Plessey.....	135
Check Digit Verification	136

Set Length Range for Plessey.....	137
MSI-Plessey.....	138
Restore Factory Defaults.....	138
Enable/Disable MSI-Plessey	138
Check Digit Verification	139
Set Length Range for MSI-Plessey.....	140
RSS-14	141
Restore Factory Defaults.....	141
Enable/Disable RSS-14.....	141
Transmit Application Identifier "01".....	141
RSS-Limited.....	142
Restore Factory Defaults.....	142
Enable/Disable RSS-Limited	142
Transmit Application Identifier "01".....	142
RSS-Expand	143
Restore Factory Defaults.....	143
Enable/Disable RSS-Expand.....	143
Appendix	144
Factory Defaults Table	144
AIM ID Table.....	151
Code ID Table.....	153
ASCII Table	154
Digit Barcodes	158
Save/Cancel Barcodes	161
F1~F12	162



W010F01

** Enter Setup

Chapter 1 Getting Started

Introduction

The EM1365-LD OEM scan engines, armed with the Newland patented **UIMG**[®], a computerized image recognition system, bring about a new era of 1D barcode scan engines.

The EM1365-LD's 1D barcode decoder chip ingeniously blends **UIMG**[®] technology and advanced chip design & manufacturing, which significantly simplifies application design and delivers superior performance and solid reliability with low power consumption.

The EM1365-LD supports EAN-13, EAN-8, UPC-A, UPC-E, ISSN, ISBN, Codabar, Code 128, Code 93, ITF-6, ITF-14, Interleaved 2 of 5, Industrial 2 of 5, Standard 2 of 5, Matrix 2 of 5, GS1 Databar, Code 39, Code 11, MSI-Plessey, Plessey.

This compact engine weighs only 6 grams and fits easily into even the most space-constrained equipments such as data collectors, meter readers, ticket validators and PDAs. Moreover, the instant power on/off feature along with ultra low power consumption brings greater efficiency and convenience in barcode scanning.



W010F00

Exit Setup



W010F01

** Enter Setup

About This Guide

This guide provides programming instructions for the EM1365-LD. Users can configure the scan engine by scanning the programming barcodes included in this manual or by sending host commands to the device.

The EM1365-LD has been properly configured for most applications and can be put into use without further configuration. Users may check the **Factory Defaults Table** in Appendix for reference. Throughout the manual, programming barcodes marked with asterisks (**) are factory default values.

Connecting EVK and PC

The EVK tool is provided to assist users in application development for the EM1365-LD. The EM1365-LD can be connected to the EVK via a 12-pin flat flexible cable. Either USB connection or RS-232 connection can be used when connecting the EVK to PC. A driver is required if EVK wants to communicate with EM1365-LD and receive decoded data through USB COM port.

Barcode Scanning

Powered by imaging technology and Newland patented **UIMG**[®] technology, the EM1365-LD features fast scanning and accurate decoding. Barcodes rotated at any angle can still be read with ease. When scanning a barcode, simply center the aiming beam projected by the EM1365-LD over the barcode.

Configuring the EM1365-LD

There are two ways to configure the engine: barcode programming and command programming.

Command Programming

The EM1365-LD can be configured by serial commands sent from the host device. Note that communication parameters on the engine and the host must match so that two devices can communicate with each other. The default settings of the engine are 9600bps, no parity check, 8 data bits, 1 stop bit, and no flow control. The engine uses 8-bit registers.



W010F00

Exit Setup



W010F01

** Enter Setup

Read Register

The read register command is used to read the contents of 1 to 256 contiguous registers in the engine.

Syntax: {Prefix1} {Types} {Lens} {Address} {Datas} {FCS}

Prefix1 : 0x7E 0x00 (2 bytes)

Types : 0x07 (1 byte)

Lens : 0x01 (1 byte).

Address: 0x0000~0xFFFF (2 bytes), starting register address.

Datas : 0x00~0xFF (1 byte), number of registers to be read. When Datas=0x00, 256 contiguous registers are to be read.

FCS : CRC-CCITT checksum (2 bytes)

Computation sequence: Types+ Lens+Address+Datas;

polynomial: $X^{16}+X^{12}+X^5+1$ (0x1021), initial value: 0x0000.

The following C language program is provided for reference.

```
unsigned int crc_cal_by_bit(unsigned char* ptr, unsigned int len)
{
    unsigned int crc = 0;
    while(len-- != 0)
    {
        for(unsigned char i = 0x80; i != 0; i /= 2)
        {
            crc *= 2;
            if((crc&0x10000) != 0)
                crc ^= 0x11021;
            if((*ptr&i) != 0)
                crc ^= 0x1021;
        }
        ptr++;
    }
    return crc;
}
```



W010F00

Exit Setup



W010F01

** Enter Setup

Reply: {Prefix2} {Types} {Lens} {Datas} {FCS}

1) Success message:

Prefix2 : 0x02 0x00

Types : 0x00 (success)

Lens : Byte count of Datas returned. If Lens=0x00, that means values of 256 contiguous registers are returned.

Datas : 0x00~0xFF, data that are returned.

FCS : CRC-CCITT checksum.

2) FCS error message:

Prefix2 : 0x02 0x00

Types : 0x01 (incorrect FCS)

Lens : 0x01

Datas : 0x00

FCS : 0x04 0x01 (CRC-CCITT checksum)

3) Invalid command message (Command starting with 0x7e 0x00 is shorter than the required length or of wrong type):

Prefix2 : 0x02 0x00

Types : 0x03 (invalid command)

Lens : 0x01

Datas : 0x00

FCS : 0x6A 0x61 (CRC-CCITT checksum)



W010F00

Exit Setup



W010F01

** Enter Setup

Example:

Read the contents (0x35, 0x36, 0x37) of 3 contiguous registers starting from register 0x0005.

1) Read operation succeeds:

Command sent: 0x7e 0x00 0x07 0x01 0x00 0x05 0x03 0xde 0xf6

Message received: 0x02 0x00 0x00 0x03 0x35 0x36 0x37 0x2a 0xba

2) Incorrect FCS:

Command sent: 0x7e 0x00 0x07 0x01 0x00 0x05 0x03 0x33 0x34

Message received: 0x02 0x00 0x01 0x01 0x00 0x04 0x01

3) Invalid command:

Command sent: 0x7e 0x00 0x07 0x01 0x00 0x05 0x03 0x33

Message received: 0x02 0x00 0x03 0x01 0x00 0x6A 0x61



W010F00

Exit Setup



W010F01

** Enter Setup

Write Register

The write register command is used to write contiguous registers (1 to 256 registers) in the engine.

Syntax: {Prefix1} {Types} {Lens} {Address} {Datas} {FCS}

Prefix1 : 0x7E 0x00 (2 bytes)

Types : 0x08 (1 byte)

Lens : 0x00~0xFF (1 byte), byte count, i.e. number of registers written. When Lens=0x00, 256 contiguous registers are to be written.

Address : 0x0000~0xFFFF (2 bytes), starting register address.

Datas : 0x00~0xFF (1~256 bytes), data to be written into the register(s)

FCS : CRC-CCITT checksum (2 bytes).

Computation sequence: Types+ Lens+Address+Ddatas;

polynomial: $X^{16}+X^{12}+X^5+1$ (0x1021), initial value: 0x0000.

The following C language program is provided for reference.

```
unsigned int crc_cal_by_bit(unsigned char* ptr, unsigned int len)
{
    unsigned int crc = 0;
    while(len-- != 0)
    {
        for(unsigned char i = 0x80; i != 0; i /= 2)
        {
            crc *= 2;
            if((crc&0x10000) != 0)
                crc ^= 0x11021;
            if((*ptr&i) != 0)
                crc ^= 0x1021;
        }
        ptr++;
    }
    return crc;
}
```



W010F00

Exit Setup



W010F01

** Enter Setup

Reply: {Prefix2} {Types} {Lens} {Datas} {FCS}

1) Success message:

Prefix2 : 0x02 0x00

Types : 0x00 (success)

Lens : 0x01

Datas : 0x00

FCS : 0x33 0x31 (CRC-CCITT checksum)

2) FCS error message:

Prefix2 : 0x02 0x00

Types : 0x01 (incorrect FCS)

Lens : 0x01

Datas : 0x00

FCS : 0x04 0x01 (CRC-CCITT checksum)

3) Invalid command message (Command starting with 0x7e 0x00 is shorter than the required length or of wrong type):

Prefix2 : 0x02 0x00

Types : 0x03 (invalid command)

Lens : 0x01

Datas : 0x00

FCS : 0x6A 0x61 (CRC-CCITT checksum)



W010F00

Exit Setup



W010F01

** Enter Setup

Example:

Write 0x31, 0x32, 0x33, 0x34 into 4 contiguous registers starting from register 0x000a.

1) Write operation succeeds:

Command sent: 0x7e 0x00 0x08 0x04 0x00 0x26 0x31 0x32 0x33 0x34 0xcd 0xa4

Message received: 0x02 0x00 0x00 0x01 0x00 0x33 0x31

2) Incorrect FCS:

Command sent: 0x7e 0x00 0x08 0x04 0x00 0x26 0x31 0x32 0x33 0x34 0x33 0x34

Message received: 0x02 0x00 0x01 0x01 0x00 0x04 0x01

3) Invalid command:

Command sent: 0x7e 0x00 0x08 0x04 0x00 0x26 0x31 0x32 0x33 0x34 0x33

Message received: 0x02 0x00 0x03 0x01 0x00 0x6A 0x61



W010F00

Exit Setup



W010F01

** Enter Setup

Enable/Disable EEPROM Write

By default, EEPROM write is disabled after the device is powered up. You need to enable it before a write operation and recommendedly disable it afterwards to prevent miswriting.

Syntax: {Prefix1} {Types} {Lens} {Address} {Datas} {FCS}

Prefix1 : 0x7E 0x00

Types : 0x03 (EEPROM write enable)/ 0x00 (EEPROM write disable)

Lens : Byte count of Datas, 0x01 recommended.

Address : No specific significance.

Datas : No specific significance.

FCS : CRC-CCITT checksum (2 bytes).

Computation sequence: Types+ Lens+Address+Datas;

polynomial: $X^{16}+X^{12}+X^5+1$ (0x1021), initial value: 0x0000.

The following C language program is provided for reference.

```
unsigned int crc_cal_by_bit(unsigned char* ptr, unsigned int len)
{
    unsigned int crc = 0;
    while(len-- != 0)
    {
        for(unsigned char i = 0x80; i != 0; i /= 2)
        {
            crc *= 2;
            if((crc&0x10000) != 0)
                crc ^= 0x11021;
            if((*ptr&i) != 0)
                crc ^= 0x1021;
        }
        ptr++;
    }
    return crc;
}
```



W010F00

Exit Setup



W010F01

** Enter Setup

Reply: {Prefix2} {Types} {Lens} {Datas} {FCS}

1) Success message:

Prefix2 : 0x02 0x00

Types : 0x00 (success)

Lens : 0x01

Datas : 0x00

FCS : 0x33 0x31 (CRC-CCITT checksum)

2) FCS error message:

Prefix2 : 0x02 0x00

Types : 0x01 (incorrect FCS)

Lens : 0x01

Datas : 0x00

FCS : 0x04 0x01 (CRC-CCITT checksum)

3) Invalid command message (Command starting with 0x7e 0x00 is shorter than the required length or of wrong type):

Prefix2 : 0x02 0x00

Types : 0x03 (invalid command)

Lens : 0x01

Datas : 0x00

FCS : 0x6A 0x61 (CRC-CCITT checksum)



W010F00

Exit Setup



W010F01

** Enter Setup

Write EEPROM

The engine has 512 bytes of EEPROM. The EEPROM write command is used to write data to up to 256 addresses. You need to enable EEPROM write before a write operation and recommendedly disable it afterwards to prevent miswriting. Note that writing without enabling it first will not return any error message. So it is recommended to implement EEPROM read operation after every write for verification.

Syntax: {Prefix1} {Types} {Lens} {Address} {Datas} {FCS}

Prefix1 : 0x7E 0x00

Types : 0x04

Lens : 0x00~0xFF, byte count of Datas. When Lens=0x00, 256 bytes are to be written.

Address : 0x0000~0xFFFF, starting address to write data to.

Datas : 0x00~0xFF, data to be written into the EEPROM

FCS : CRC-CCITT checksum (2 bytes).

Computation sequence: Types+ Lens+Address+Datas;

polynomial: $X^{16}+X^{12}+X^5+1$ (0x1021), initial value: 0x0000.

The following C language program is provided for reference.

```
unsigned int crc_cal_by_bit(unsigned char* ptr, unsigned int len)
{
    unsigned int crc = 0;
    while(len-- != 0)
    {
        for(unsigned char i = 0x80; i != 0; i /= 2)
        {
            crc *= 2;
            if((crc&0x10000) != 0)
                crc ^= 0x11021;
            if((*ptr&i) != 0)
                crc ^= 0x1021;
        }
        ptr++;
    }
    return crc;
}
```



W010F00

Exit Setup



W010F01

** Enter Setup

Reply: {Prefix2} {Types} {Lens} {Datas} {FCS}

1) Success message:

Prefix2 : 0x02 0x00
Types : 0x00 (success)
Lens : 0x01
Datas : 0x00
FCS : 0x33 0x31 (CRC-CCITT checksum)

2) FCS error message:

Prefix2 : 0x02 0x00
Types : 0x01 (incorrect FCS)
Lens : 0x01
Datas : 0x00
FCS : 0x04 0x01 (CRC-CCITT checksum)

3) EERPOM not responding message:

Prefix2 : 0x02 0x00
Types : 0x02 (EEPROM not responding)
Lens : 0x01
Datas : 0x00
FCS : 0x5d 0x51 (CRC-CCITT checksum)

4) Invalid command message (Command starting with 0x7e 0x00 is shorter than the required length or of wrong type):

Prefix2 : 0x02 0x00
Types : 0x03 (invalid command)
Lens : 0x01
Datas : 0x00
FCS : 0x6A 0x61 (CRC-CCITT checksum)



W010F00

Exit Setup



W010F01

** Enter Setup

Example:

Write 0x51, 0x52, 0x53, 0x54 into 4 contiguous addresses starting from address 0x0000.

1) Write operation succeeds:

Command sent: 0x7e 0x00 0x04 0x04 0x00 0x00 0x51 0x52 0x53 0x54 0xbc 0x17

Message received: 0x02 0x00 0x00 0x01 0x00 0x33 0x31

2) Incorrect FCS:

Command sent: 0x7e 0x00 0x04 0x03 0x00 0x00 0x51 0x52 0x53 0x54 0x33 0x34

Message received: 0x02 0x00 0x01 0x01 0x00 0x04 0x01



W010F00

Exit Setup



W010F01

** Enter Setup

Read EEPROM

The engine has 512 bytes of EEPROM. The EEPROM read command is used to read the contents from 1 to 256 contiguous addresses of the EEPROM.

Syntax: {Prefix1} {Types} {Lens} {Address} {Datas} {FCS}

Prefix1 : 0x7E 0x00

Types : 0x05

Lens : 0x01

Address: 0x0000~0xFFFF (2 bytes), starting EEPROM address to read.

Datas : 0x00~0xFF, number of EEPROM addresses to be read. When Datas=0x00, 256 contiguous addresses are to be read.

FCS : CRC-CCITT checksum (2 bytes)

Computation sequence: Types+ Lens+Address+Datas;

polynomial: $X^{16}+X^{12}+X^5+1(0x1021)$, initial value: 0x0000.

The following C language program is provided for reference.

```
unsigned int crc_cal_by_bit(unsigned char* ptr, unsigned int len)
{
    unsigned int crc = 0;
    while(len-- != 0)
    {
        for(unsigned char i = 0x80; i != 0; i /= 2)
        {
            crc *= 2;
            if((crc&0x10000) != 0)
                crc ^= 0x11021;
            if((*ptr&i) != 0)
                crc ^= 0x1021;
        }
        ptr++;
    }
    return crc;
}
```



W010F00

Exit Setup



W010F01

** Enter Setup

Reply: {Prefix2} {Types} {Lens} {Datas} {FCS}

1) Success message:

Prefix2 : 0x02 0x00
Types : 0x00 (success)
Lens : Byte count of Datas returned.
Datas : 0x00~0xFF, data that are returned.
FCS : CRC-CCITT checksum.

2) FCS error message:

Prefix2 : 0x02 0x00
Types : 0x01 (incorrect FCS)
Lens : 0x01
Datas : 0x00
FCS : 0x04 0x01 (CRC-CCITT checksum)

3) EERPOM not responding message:

Prefix2 : 0x02 0x00
Types : 0x02 (EEPROM not responding)
Lens : 0x01
Datas : 0x00
FCS : 0x5d 0x51 (CRC-CCITT checksum)

4) Invalid command message (Command starting with 0x7e 0x00 is shorter than the required length or of wrong type):

Prefix2 : 0x02 0x00
Types : 0x03 (invalid command)
Lens : 0x01
Datas : 0x00
FCS : 0x6A 0x61 (CRC-CCITT checksum)



W010F00

Exit Setup



W010F01

** Enter Setup

Example:

Read the contents (0x35 0x36 0x37) of 3 contiguous EEPROM addresses starting from address 0x0005.

1) Read operation succeeds:

Command sent: 0x7e 0x00 0x05 0x01 0x00 0x05 0x03 0x9a 0x75

Message received: 0x02 0x00 0x00 0x03 0x35 0x36 0x37 0x2a 0xba

2) Incorrect FCS:

Command sent: 0x7e 0x00 0x05 0x01 0x00 0x05 0x03 0x33 0x34

Message received: 0x02 0x00 0x01 0x01 0x00 0x04 0x01



W010F00

Exit Setup



W010F01

** Enter Setup

Registers

Register	0x0000	
Bit	Feature	
Bit 7	Reserved	
Bit 6	1: Silent Mode Off	0: Silent Mode On
Bit 5-4	Reserved	
Bit 3-2	Illumination: 00: Off 01: On When Scanning 10/11: Always On	
Bit 1-0	Scan Mode: 00: Manual Mode 01: Command Trigger Mode 10: Continuous Mode 11: Sense Mode	
Register	0x0003	
Bit	Feature	
Bit 7-0	Sensitivity 0x00~0xFF: 0-255 levels. The smaller the value, the higher the sensitivity.	
Register	0x0004	
Bit	Feature	
Bit 7-0	Image Stabilization Timeout 0x00-0xFF: 0.0-25.5s	
Register	0x0005	
Bit	Feature	
Bit 7-0	Timeout between Decodes 0x00-0xFF: 0.0-25.5s	
Register	0x0006	
Bit	Feature	
Bit 7-0	Decode Session Timeout 0x00: Infinite time; 0x01-0xFF: 1-255s	
Register	0x0007	
Bit	Feature	
Bit 7-0	Timeout between Decodes (Same Barcode) 0x00: Infinite time; 0x01-0xFF: 0.1-25.5s	



W010F00

Exit Setup



W010F01

** Enter Setup

Register	0x0009		
Bit	Feature		
Bit 7-5	Reserved		
Bit 4	0: Serial Communication		
Bit 3-2	Reserved		
Bit 1-0	00: USB DataPipe 01: USB HID-KBW 10: USB COM Port Emulation 11: USB HID-POS		
Register	0x000A		
Bit	Feature		
Bit 7-5	Reserved		
Bit 4	0: Allow Rereading Same Barcode		1: Disallow Rereading Same Barcode
Bit 3-2	Reserved		
Bit 1-0	Security Level 00-03: 0-3 level. The higher the value, the lower the error rate and efficiency.		
Register	0x000F		
Bit	Feature		
Bit 7-3	Reserved		
Bit 2-1	00: Do Not Transmit Programming Barcode Data 11: Transmit Programming Barcode Data		
Bit 0	0: Exit Setup		1: Enter Setup
Register	0x0010		
Bit	Feature		
Bit 7-0	Good Read Beep Frequency 0xDA: Low 0x4B: Medium 0x25: High		
Register	0x0011		
Bit	Feature		
Bit 7-0	Good Read Beep Duration 0x1F: 40ms 0x3E: 80ms 0x5D: 120ms		
Register	0x0012		
Bit	Feature		
Bit 7-3	Reserved		
Bit 2	1: Good Read Beep On		0: Good Read Beep Off
Bit 1-0	Reserved		



W010F00

Exit Setup



W010F01

** Enter Setup

Register	0x0019		
Bit	Feature		
Bit 7-0	USB Country Keyboard Types		
	00: U.S.	01: Belgium	02: Brazil
	03: Canada	04: Czech	05: Denmark
	06: Finland	07: France	08: Austria
	09: Greece	0A: Hungary	0B: Israel
	0C: Italy	0D: Latin America	0E: Netherland
	0F: Norway	10: Poland	11: Portugal
	12: Romania	13: Russia	15: Slovakia
	16: Spain	17: Sweden	18: Switzerland
	19: Turkey1	1A: Turkey2	1B: UK
	1C: Japan		
	Register	0x001A	
Bit	Feature		
Bit 7-6	Inter-keystroke delay		
	00: No delay	01: Short delay (5ms)	
	10: Medium delay (10ms)	11: Long delay (15ms)	
Bit 5-3	Convert case		
	000: No Case Conversion	001: Invert Upper and Lower Case Characters	
	100/101: Convert All to Upper Case	110/111: Convert All to Lower Case	
Bit 2	1: Emulate Numeric Keypad		0: Do Not Emulate Numeric Keypad
Bit 1-0	00: Standard Keyboard	01: Function Key Mapping	10/11: Emulate ALT+Keypad



W010F00

Exit Setup



W010F01

** Enter Setup

Register		0x0029	
Bit	Feature		
Bit 7-4	Reserved		
Bit 3	1: 8 Data Bits	0: 7 Data Bits	
Bit 2-1	Parity Check 00/01: None	10: Odd	11: Even
Bit 0	1: 2 Stop Bits	0: 1 Stop Bit	
Register		0x002B, 0x2A	
Bit	Feature		
Bit 15-13	Reserved		
Bit 12-0	0x09C4: Baud Rate 1200 0x04E2: Baud Rate 2400 0x0271: Baud Rate 4800 0x0139: Baud Rate 9600 0x00D0: Baud Rate 14400 0x009C: Baud Rate 19200 0x004E: Baud Rate 38400 0x0034: Baud Rate 57600 0x001A: Baud Rate 115200		
Register		0x0031	
Bit	Feature		
Bit 7-6	Reserved		
Bit 5	1: Enable Decode Result Notification	0: Disable Decode Result Notification	
Bit 4	1: Enable Terminating Character Suffix	0: Disable Terminating Character Suffix	
Bit 3	1: Enable Custom Suffix	0: Disable Custom Suffix	
Bit 2	1: Enable Custom Prefix	0: Disable Custom Prefix	
Bit 1	1: Enable CODE ID Prefix	0: Disable CODE ID Prefix	
Bit 0	Prefix Sequence 1: Custom+Code ID+ AIM ID	0: Code ID+Custom+AIM ID	



W010F00

Exit Setup



W010F01

** Enter Setup

Register	0x0037-0x33		
Bit	Feature		
Bit 39-0	Set Custom Prefix		
Register	0x0042-0x3E		
Bit	Feature		
Bit 39-0	Set Custom Suffix		
Register	0x004D-0x49		
Bit	Feature		
Bit 39-0	Set Terminating Character Suffix		
Register	0x0061		
Bit	Feature		
Bit 7-1	Reserved		
Bit 0	1: Enable Code 128	0: Disable Code 128	
Register	0x0062		
Bit	Feature		
Bit 7-2	Reserved		
Bit 1-0	00: Disable UCC/EAN 128	01: Decode as Code 128	10/11: Enable UCC/EAN 128
Register	0x0063		
Bit	Feature		
Bit 7-2	Reserved		
Bit 1-0	00: Disable AIM 128	01: Decode as Code 128	10/11: Enable AIM 128
Register	0x0065		
Bit	Feature		
Bit 7-6	EAN-8 Extension 00: Disable EAN-8 Zero Extend 01: Enable EAN-8 Zero Extend 10/11: Convert EAN-8 to EAN-13		
Bit 5	1: Enable EAN-8 5-digit Add-on Code	0: Disable EAN-8 5-digit Add-on Code	
Bit 4	1: Enable EAN-8 2-digit Add-on Code	0: Disable EAN-8 2-digit Add-on Code	
Bit 3	1: EAN-8 Add-on Code Required	0: EAN-8 Add-on Code Not Required	
Bit 2	1: Transmit EAN-8 Check Digit	0: Do Not Transmit EAN-8 Check Digit	
Bit 1	Reserved		
Bit 0	1: Enable EAN-8	0: Disable EAN-8	



W010F00

Exit Setup



W010F01

** Enter Setup

Register	0x006A	
Bit	Feature	
Bit 7-6	Reserved	
Bit 5-4	UPC-E System Character 01: Do not transmit system character 10/11: Transmit system character	
Bit 3-2	Reserved	
Bit 1-0	UPC-A Preamble Character 00: No Preamble 01: System Character 10/11: System Character & Country Code	
Register	0x006B	
Bit	Feature	
Bit 7	Reserved	
Bit 6	1: Enable UPC-A 5-digit Add-on Code	0: Disable UPC-A 5-digit Add-on Code
Bit 5	1: Enable UPC-A 2-digit Add-on Code	0: Disable UPC-A 2-digit Add-on Code
Bit 4	1: UPC-A Add-on Code Required	0: UPC-A Add-on Code Not Required
Bit 3	1: Transmit UPC-A Check Digit	0: Do Not Transmit UPC-A Check Digit
Bit 2	Reserved	
Bit 1-0	00: Disable UPC-A 01: Decode as EAN-13	10/11: Enable UPC-A
Register	0x006C	
Bit	Feature	
Bit 7-4	Reserved	
Bit 3	1: Transmit Interleaved 2 of 5 Check Digit	0: Do Not Transmit Interleaved 2 of 5 Check Digit
Bit 2	1: Enable Interleaved 2 of 5 Check Digit	0: Disable Interleaved 2 of 5 Check Digit
Bit 1	Reserved	
Bit 0	1: Enable Interleaved 2 of 5	0: Disable Interleaved 2 of 5
Register	0x006D	
Bit	Feature	
Bit 7-4	Reserved	
Bit 3	1: Transmit ITF-6 Check Digit	0: Do Not Transmit ITF-6 Check Digit
Bit 2	Reserved	
Bit 1-0	00: Disable ITF-6 01: Decode as Interleaved 2 of 5	10/11: Enable ITF-6



W010F00

Exit Setup



W010F01

** Enter Setup

Register	0x006E	
Bit	Feature	
Bit 7-4	Reserved	
Bit 3	1: Transmit ITF-14 Check Digit	0: Do Not Transmit ITF-14 Check Digit
Bit 2	Reserved	
Bit 1-0	00: Disable ITF-14	01: Decode as Interleaved 2 of 5 10/11: Enable ITF-14
Register	0x006F	
Bit	Feature	
Bit 7-4	Reserved	
Bit 3	1: Transmit Deutsche 14 Check Digit	0: Do Not Transmit Deutsche 14 Check Digit
Bit 2	Reserved	
Bit 1-0	00: Disable Deutsche 14	01: Decode as Interleaved 2 of 5 10/11: Enable Deutsche 14
Register	0x0070	
Bit	Feature	
Bit 7-4	Reserved	
Bit 3	1: Transmit Deutsche 12 Check Digit	0: Do Not Transmit Deutsche 12 Check Digit
Bit 2	Reserved	
Bit 1-0	00: Disable Deutsche 12	01: Decode as Interleaved 2 of 5 10/11: Enable Deutsche 12
Register	0x0071	
Bit	Feature	
Bit 7-4	Reserved	
Bit 3	1: Transmit Matrix 2 of 5 Check Digit	0: Do Not Transmit Matrix 2 of 5 Check Digit
Bit 2	1: Enable Matrix 2 of 5 Check Digit	0: Disable Matrix 2 of 5 Check Digit
Bit 1	Reserved	
Bit 0	1: Enable Matrix 2 of 5	0: Disable Matrix 2 of 5
Register	0x0072	
Bit	Feature	
Bit 7-4	Reserved	
Bit 3	1: Transmit Industrial 25 Check Digit	0: Do Not Transmit Industrial 25 Check Digit
Bit 2	1: Enable Industrial 25 Check Digit	0: Disable Industrial 25 Check Digit
Bit 1	Reserved	
Bit 0	1: Enable Industrial 25	0: Disable Industrial 25



W010F00

Exit Setup



W010F01

** Enter Setup

Register		0x0073	
Bit	Feature		
Bit 7-4	Reserved		
Bit 3	1: Transmit Standard 25 Check Digit	0: Do Not Transmit Standard 25 Check Digit	
Bit 2	1: Enable Standard 25 Check Digit	0: Disable Standard 25 Check Digit	
Bit 1	Reserved		
Bit 0	1: Enable Standard 25	0: Disable Standard 25	
Register		0x0074	
Bit	Feature		
Bit 7-6	Reserved		
Bit 5	1: Enable Code 39 Full ASCII	0: Disable Code 39 Full ASCII	
Bit 4	1: Transmit Code 39 Check Digit	0: Do Not Transmit Code 39 Check Digit	
Bit 3	1: Enable Code 39 Check Digit	0: Disable Code 39 Check Digit	
Bit 2	1: Transmit Code 39 Start/Stop Characters 0: Do Not Transmit Code 39 Start/Stop Characters		
Bit 1	Reserved		
Bit 0	1: Enable Code 39	0: Disable Code 39	
Register		0x0075	
Bit	Feature		
Bit 7	Reserved		
Bit 6	1: Transmit Codabar Check Digit	0: Do Not Transmit Codabar Check Digit	
Bit 5	1: Enable Codabar Check Digit	0: Disable Codabar Check Digit	
Bit 4-3	Codabar Start/Stop Character Format: 00: ABCD/ABCD 01: ABCD/TN*E 10: abcd/abcd 11: abcd/tn*e		
Bit 2	1: Transmit Codabar Start/Stop Characters 0: Do Not Transmit Codabar Start/Stop Characters		
Bit 1	Reserved		
Bit 0	1: Enable Codabar	0: Disable Codabar	



W010F00

Exit Setup



W010F01

** Enter Setup

Register	0x0076	
Bit	Feature	
Bit 7-4	Reserved	
Bit 3	1: Transmit Code 93 Check Digit	0: Do Not Transmit Code 93 Check Digit
Bit 2	1: Enable Code 93 Check Digit	0: Disable Code 93 Check Digit
Bit 1	Reserved	
Bit 0	1: Enable Code 93	0: Disable Code 93
Register	0x0077	
Bit	Feature	
Bit 7-6	Reserved	
Bit 5	1: Transmit Code 11 Check Digit	0: Do Not Transmit Code 11 Check Digit
Bit 4-2	Code 11 Check Digit Verification: 000: Disable 001: One Check Digit, MOD11 010: Two Check Digits, MOD11/MOD11 011: Two Check Digits, MOD11/MOD9 100: One Check Digit, MOD11 (Len <= 11); Two Check Digits, MOD11/MOD11 (Len > 11) 101: One Check Digit, MOD11 (Len <= 11); Two Check Digits, MOD11/MOD9 (Len > 11)	
Bit 1	Reserved	
Bit 0	1: Enable Code 11	0: Disable Code 11
Register	0x0078	
Bit	Feature	
Bit 7-4	Reserved	
Bit 3	1: Transmit Plessey Check Digit	0: Do Not Transmit Plessey Check Digit
Bit 2	1: Enable Plessey Check Digit	0: Disable Plessey Check Digit
Bit 1	Reserved	
Bit 0	1: Enable Plessey	0: Disable Plessey



W010F00

Exit Setup



W010F01

** Enter Setup

Register	0x0079	
Bit	Feature	
Bit 7-5	Reserved	
Bit 4	1: Transmit MSI-Plessey Check Digit	0: Do Not Transmit MSI-Plessey Check Digit
Bit 3-2	MSI-Plessey Check Digit Verification: 00: Disable 01: One Check Digit, MOD10 10: Two Check Digits, MOD10/MOD10 11: Two Check Digits, MOD10/MOD11	
Bit 1	Reserved	
Bit 0	1: Enable MSI-Plessey	0: Disable MSI-Plessey
Register	0x007A	
Bit	Feature	
Bit 7-3	Reserved	
Bit 2	1: Transmit RSS-14 Application Identifier	0: Do Not Transmit RSS-14 Application Identifier
Bit 1	Reserved	
Bit 0	1: Enable RSS-14	0: Disable RSS-14
Register	0x007B	
Bit	Feature	
Bit 7-3	Reserved	
Bit 2	1: Transmit RSS-Limited Application Identifier 0: Do Not Transmit RSS-Limited Application Identifier	
Bit 1	Reserved	
Bit 0	1: Enable RSS-Limited	0: Disable RSS-Limited
Register	0x007C	
Bit	Feature	
Bit 7-1	Reserved	
Bit 0	1: Enable RSS-Expand	0: Disable RSS-Expand



W010F00

Exit Setup



W010F01

** Enter Setup

Register	<i>0x0080</i>	
Bit		Feature
Bit 7-0	Set Code 128 Maximum Length	
Register	<i>0x0081</i>	
Bit		Feature
Bit 7-0	Set Code 128 Minimum Length	
Register	<i>0x0082</i>	
Bit		Feature
Bit 7-0	Set UCC/EAN-128 Maximum Length	
Register	<i>0x0083</i>	
Bit		Feature
Bit 7-0	Set UCC/EAN-128 Minimum Length	
Register	<i>0x0084</i>	
Bit		Feature
Bit 7-0	Set AIM 128 Maximum Length	
Register	<i>0x0085</i>	
Bit		Feature
Bit 7-0	Set AIM 128 Minimum Length	
Register	<i>0x0086</i>	
Bit		Feature
Bit 7-0	Set Interleaved 2 of 5 Maximum Length	
Register	<i>0x0087</i>	
Bit		Feature
Bit 7-0	Set Interleaved 2 of 5 Minimum Length	
Register	<i>0x0088</i>	
Bit		Feature
Bit 7-0	Set Matrix 2 of 5 Maximum Length	
Register	<i>0x0089</i>	
Bit		Feature
Bit 7-0	Set Matrix 2 of 5 Minimum Length	



W010F00

Exit Setup



W010F01

** Enter Setup

Register	<i>0x008A</i>
Bit	Feature
Bit 7-0	Set Industrial 25 Maximum Length
Register	<i>0x008B</i>
Bit	Feature
Bit 7-0	Set Industrial 25 Minimum Length
Register	<i>0x008C</i>
Bit	Feature
Bit 7-0	Set Standard 25 Maximum Length
Register	<i>0x008D</i>
Bit	Feature
Bit 7-0	Set Standard 25 Minimum Length
Register	<i>0x008E</i>
Bit	Feature
Bit 7-0	Set Code 39 Maximum Length
Register	<i>0x008F</i>
Bit	Feature
Bit 7-0	Set Code 39 Minimum Length
Register	<i>0x0090</i>
Bit	Feature
Bit 7-0	Set Codabar Maximum Length
Register	<i>0x0091</i>
Bit	Feature
Bit 7-0	Set Codabar Minimum Length
Register	<i>0x0092</i>
Bit	Feature
Bit 7-0	Set Code 93 Maximum Length
Register	<i>0x0093</i>
Bit	Feature
Bit 7-0	Set Code 93 Minimum Length



W010F00

Exit Setup



W010F01

** Enter Setup

Register	<i>0x0094</i>	
Bit		Feature
Bit 7-0	Set Code 11 Maximum Length	
Register	<i>0x0095</i>	
Bit		Feature
Bit 7-0	Set Code 11 Minimum Length	
Register	<i>0x0096</i>	
Bit		Feature
Bit 7-0	Set Plessey Maximum Length	
Register	<i>0x0097</i>	
Bit		Feature
Bit 7-0	Set Plessey Minimum Length	
Register	<i>0x0098</i>	
Bit		Feature
Bit 7-0	Set MSI-Plessey Maximum Length	
Register	<i>0x0099</i>	
Bit		Feature
Bit 7-0	Set MSI-Plessey Minimum Length	
Register	<i>0x00A1, 0x00A0</i>	
Bit		Feature
Bit 15-0	Set Code 128 Code ID ASCII value of one or two English letters (lower or upper case)	
Register	<i>0x00A3, 0x00A2</i>	
Bit		Feature
Bit 15-0	Set UCC/EAN-128 Code ID ASCII value of one or two English letters (lower or upper case)	
Register	<i>0x00A5, 0x00A4</i>	
Bit		Feature
Bit 15-0	Set AIM 128 Code ID ASCII value of one or two English letters (lower or upper case)	



W010F00

Exit Setup



W010F01

** Enter Setup

Register	<i>0x00A9, 0x00A8</i>
Bit	Feature
Bit 15-0	Set EAN-8 Code ID ASCII value of one or two English letters (lower or upper case)
Register	<i>0x00AB, 0x00AA</i>
Bit	Feature
Bit 15-0	Set EAN-13 Code ID ASCII value of one or two English letters (lower or upper case)
Register	<i>0x00AD, 0x00AC</i>
Bit	Feature
Bit 15-0	Set ISSN Code ID ASCII value of one or two English letters (lower or upper case)
Register	<i>0x00B1, 0x00B0</i>
Bit	Feature
Bit 15-0	Set UPC-E Code ID ASCII value of one or two English letters (lower or upper case)
Register	<i>0x00B3, 0x00B2</i>
Bit	Feature
Bit 15-0	Set UPC-A Code ID ASCII value of one or two English letters (lower or upper case)
Register	<i>0x00B5, 0x00B4</i>
Bit	Feature
Bit 15-0	Set Interleaved 2 of 5 Code ID ASCII value of one or two English letters (lower or upper case)
Register	<i>0x00B7, 0x00B6</i>
Bit	Feature
Bit 15-0	Set ITF-6 Code ID ASCII value of one or two English letters (lower or upper case)



W010F00

Exit Setup



W010F01

** Enter Setup

Register	<i>0x00B9, 0x00B8</i>
Bit	Feature
Bit 15-0	Set ITF-14 Code ID ASCII value of one or two English letters (lower or upper case)
Register	<i>0x00BB, 0x00BA</i>
Bit	Feature
Bit 15-0	Set Deutsche 14 Code ID ASCII value of one or two English letters (lower or upper case)
Register	<i>0x00BD, 0x00BC</i>
Bit	Feature
Bit 15-0	Set Deutsche 12 Code ID ASCII value of one or two English letters (lower or upper case)
Register	<i>0x00BF, 0x00BE</i>
Bit	Feature
Bit 15-0	Set Matrix 2 of 5 Code ID ASCII value of one or two English letters (lower or upper case)
Register	<i>0x00C1, 0x00C0</i>
Bit	Feature
Bit 15-0	Set Industrial 25 Code ID ASCII value of one or two English letters (lower or upper case)
Register	<i>0x00C3, 0x00C2</i>
Bit	Feature
Bit 15-0	Set Standard 25 Code ID ASCII value of one or two English letters (lower or upper case)
Register	<i>0x00C5, 0x00C4</i>
Bit	Feature
Bit 15-0	Set Code 39 Code ID ASCII value of one or two English letters (lower or upper case)



W010F00

Exit Setup



W010F01

** Enter Setup

Register	<i>0x00C7, 0x00C6</i>	
Bit	Feature	
Bit 15-0	Set Codabar Code ID ASCII value of one or two English letters (lower or upper case)	
Register	<i>0x00C9, 0x00C8</i>	
Bit	Feature	
Bit 15-0	Set Code 93 Code ID ASCII value of one or two English letters (lower or upper case)	
Register	<i>0x00CB, 0x00CA</i>	
Bit	Feature	
Bit 15-0	Set Code 11 Code ID ASCII value of one or two English letters (lower or upper case)	
Register	<i>0x00CD, 0x00CC</i>	
Bit	Feature	
Bit 15-0	Set Plessey Code ID ASCII value of one or two English letters (lower or upper case)	
Register	<i>0x00CF, 0x00CE</i>	
Bit	Feature	
Bit 15-0	Set MSI-Plessey Code ID ASCII value of one or two English letters (lower or upper case)	
Register	<i>0x00D1, 0x00D0</i>	
Bit	Feature	
Bit 15-0	Set RSS-14 Code ID ASCII value of one or two English letters (lower or upper case)	
Register	<i>0x00D3, 0x00D2</i>	
Bit	Feature	
Bit 15-0	Set RSS-Limited Code ID ASCII value of one or two English letters (lower or upper case)	
Register	<i>0x00D5, 0x00D4</i>	
Bit	Feature	
Bit 15-0	Set RSS-Expand Code ID ASCII value of one or two English letters (lower or upper case)	



W010F00

Exit Setup




W010F01

** Enter Setup

Barcode Programming

The EM1365-LD can be configured by scanning programming barcodes. All user programmable features/options are described along with their programming barcodes/commands in the following sections.

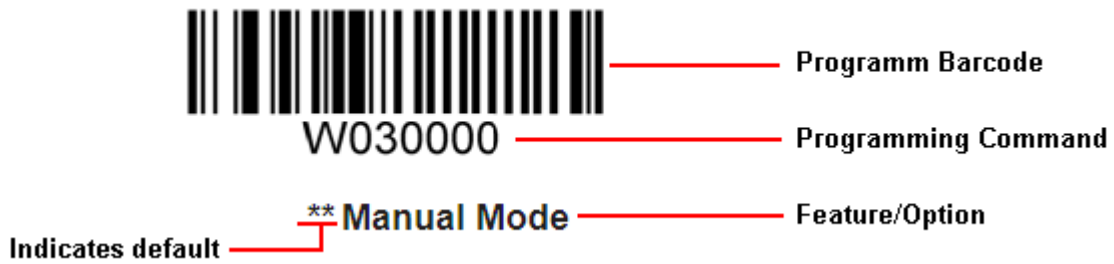

Enter/Exit Setup



W010F01

** Enter Setup



W010F00

Exit Setup

Programming Barcode Data



W060F00

** Do Not Transmit Programming Barcode Data



W060F06

Transmit Programming Barcode Data



W010F00

Exit Setup



W010F01

** Enter Setup

Factory Defaults

Scanning the following barcode can restore the engine to the factory defaults.

You may need to reset your engine when:

1. engine is not properly configured so that it fails to decode barcodes;
2. you forget previous configuration and want to avoid its impact;
3. functions that are rarely used have been enabled for the time being.



WFFD980

Restore All Factory Defaults



W010F00

Exit Setup



W010F01

** Enter Setup

Chapter 2 Scan Mode

Manual Mode

Manual Mode (default): A trigger pull activates a decode session. The decode session continues until the barcode is decoded or the trigger is released or the decode session timeout expires.



W030000

** Manual Mode

Decode Session Timeout: This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 1s increments from 1s to 255s. The default timeout is 15s. If the parameter is set to 0, the decode session timeout is infinite.



M00031D

Decode Session Timeout

Example: Set the decode session timeout to 5s

1. Scan the **Enter Setup** barcode.
2. Scan the **Decode Session Timeout** barcode.
3. Scan the numeric barcode "5". (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

Continuous Mode

Continuous Mode: A trigger press activates the engine to scan and decode at user-specified intervals, i.e. the timeout between decodes. Each decode session lasts until barcode is decoded or the decode session timeout expires. To suspend/resume the operation, simply press the trigger. By default, the engine rereads same barcode with no delay.



W030002

Continuous Mode

Decode Session Timeout: This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 1s increments from 1s to 255s. The default timeout is 15s. If the parameter is set to 0, the decode session timeout is infinite.



M00031D

Decode Session Timeout

Example: Set the decode session timeout to 5s

1. Scan the **Enter Setup** barcode.
2. Scan the **Decode Session Timeout** barcode.
3. Scan the numeric barcode "5". (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

Timeout between Decodes: This parameter sets the timeout between decode sessions. When a decode session ends, next session will not happen until the timeout between decodes expires. It is programmable in 0.1s increments from 0.0s to 25.5s. The default timeout is 1.0s.



M00031C

Timeout between Decodes

Example: Set the timeout between decodes to 5s

1. Scan the **Enter Setup** barcode.
2. Scan the **Timeout between Decodes** barcode.
3. Scan the numeric barcodes “5” and “0”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

Reread Delay sets the time period before the engine can read the same barcode a second time. It protects against accidental rereads of the same barcode. This parameter is programmable in 0.1s increments from 0.1s to 25.5s. The default delay is 3.0s. If the parameter is set to 0, the delay is infinite.

Note: This parameter only applies when the **Reread Same Barcode with a Delay** is enabled.



M00031E

Reread Delay

Reread Same Barcode with No Delay: The engine is allowed to reread same barcode, ignoring the reread delay.

Reread Same Barcode with a Delay: The engine is not allowed to reread same barcode before the reread delay expires.

To disable rereads of same barcode, enable the **Reread Same Barcode with a Delay** and set the delay to 0.



W100A00

** Reread Same Barcode with No Delay



W100A10

Reread Same Barcode with a Delay

Example: Set the reread delay to 5s

1. Scan the **Enter Setup** barcode.
2. Scan the **Reread Delay** barcode.
3. Scan the numeric barcodes “5” and “0”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

Sense Mode

Sense Mode: The engine activates a decode session every time when it detects a change in ambient illumination and meets the requirement of the image stabilization timeout. Decode session continues until barcode is decoded or the decode session timeout expires. A trigger pull can also activate a decode session. By default, the engine rereads same barcode with no delay.



W030003

Sense Mode

Decode Session Timeout: This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 1s increments from 1s to 255s. The default timeout is 15s. If the parameter is set to 0, the decode session timeout is infinite.



M00031D

Decode Session Timeout

Example: Set the decode session timeout to 5s

1. Scan the **Enter Setup** barcode.
2. Scan the **Decode Session Timeout** barcode.
3. Scan the numeric barcode "5". (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

Image Stabilization Timeout: The engine waits for the image stabilization timeout to expire before activating a decode session every time it detects a change in ambient illumination. This parameter is programmable in 0.1s increments from 0.0s to 25.5s. The default timeout is 0.4s.



M00031B

Image Stabilization Timeout

Example: Set the Image Stabilization Timeout to 5s

1. Scan the **Enter Setup** barcode.
2. Scan the **Image Stabilization Timeout** barcode.
3. Scan the numeric barcodes “5” and “0”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

Reread Delay sets the time period before the engine can read the same barcode a second time. It protects against accidental rereads of the same barcode. This parameter is programmable in 0.1s increments from 0.1s to 25.5s. The default delay is 3.0s. If the parameter is set to 0, the delay is infinite.

Note: This parameter only applies when the **Reread Same Barcode with a Delay** is enabled.



M00031E

Reread Delay

Reread Same Barcode with No Delay: The engine is allowed to reread same barcode, ignoring the reread delay.

Reread Same Barcode with a Delay: The engine is not allowed to reread same barcode before the reread delay expires.

To disable rereads of same barcode, enable the **Reread Same Barcode with a Delay** and set the delay to 0.



W100A00

** Reread Same Barcode with No Delay



W100A10

Reread Same Barcode with a Delay

Example: Set the reread delay to 5s

1. Scan the **Enter Setup** barcode.
2. Scan the **Reread Delay** barcode.
3. Scan the numeric barcodes “5” and “0”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

Sensitivity: This parameter specifies the degree of acuteness of the engine's response to changes in ambient illumination. The higher the sensitivity, the lower requirement in illumination change to trigger the engine. You can select an appropriate degree of sensitivity that fits the ambient environment.



WFF0305

High Sensitivity



WFF0310

** Medium Sensitivity



WFF0330

** Medium Sensitivity



M00031A

Custom Sensitivity

Sensitivity levels range from 0 to 255. The smaller the number, the higher the sensitivity.

Example: Set the sensitivity level to 10

1. Scan the **Enter Setup** barcode.
2. Scan the **Custom Sensitivity** barcode.
3. Scan the numeric barcodes "1" and "0". (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

Command Trigger Mode

Command Trigger Mode: Decode session is activated by a host command. The decode session continues until the barcode is decoded or the decode session timeout expires.



W030001

Command Trigger Mode

Decode Session Timeout: This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 1s increments from 1s to 255s. The default timeout is 15s. If the parameter is set to 0, the decode session timeout is infinite.



M00031D

Decode Session Timeout

Example: Set the decode session timeout to 5s

1. Scan the **Enter Setup** barcode.
2. Scan the **Decode Session Timeout** barcode.
3. Scan the numeric barcode "5". (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

Chapter 3 Notification

Good Read Beep



W041204

** Good Read Beep On



W041200

Good Read Beep Off




WFF10DA

Low Frequency



WFF104B

 ** Medium Frequency



WFF1025

High Frequency



WFF111F

Beep Duration: 40ms



WFF113E

** Beep Duration: 80ms



WFF115D

Beep Duration: 120ms



W010F00

Exit Setup



W010F01

** Enter Setup

Decode Result Notification

When enabled, if a barcode does not decode, "F" is transmitted; if a barcode is decoded, "S" is appended to the barcode data as the most left character.



W203120

Enable Decode Result Notification



W203100

** Disable Decode Result Notification



W010F00

Exit Setup



W010F01

** Enter Setup

Other Settings

You can change the following parameter settings temporarily and the changes will be lost when you power down or reboot the engine.

Silent Mode



W400000

Silent Mode On



W400040

** Silent Mode Off

Note: This feature is only applicable to decode beep and will be automatically disabled when the engine is powered down or rebooted.

Illumination



W0C0000

Off



W0C0008

Always On



W0C0004

** On When Scanning



W010F00

Exit Setup



W010F01

** Enter Setup

Chapter 4 Communication Settings

The engine provides an TTL-232 interface and a USB interface to communicate with the host device. The host device can receive scanned data and send commands to control the engine or to access/alter the configuration information of the engine via the TTL-232 or USB interface.



W010F00

Exit Setup



W010F01

** Enter Setup

TTL-232 Interface

Baud Rate

When the engine is connected to a host device through its TTL-232 interface, you need to set communication parameters (including baud rate) to match the host device.

Baud rate is the number of bits of data transmitted per second. Set the engine's baud rate to match the Host requirements.



WFFD9D3

** 9600



WFFD9D0

1200



WFFD9D5

19200



WFFD9D1

2400



WFFD9D6

38400



WFFD9D2

4800



WFFD9D7

57600



WFFD9D4

14400



WFFD9D8

115200



W010F00

Exit Setup



W010F01

** Enter Setup

Parity Check



W062900

** None



W062906

Even Parity



W062904

Odd Parity

Stop Bit



W012900

** 1 Stop Bit



W012901

2 Stop Bits



W010F00

Exit Setup



W010F01

** Enter Setup

Data Bit



W082908

8 Data Bits



W0F2908

** 8 Data Bits, No Parity, 1 Stop Bit



W0F290E

8 Data Bits, Even Parity, 1 Stop Bit



W0F290C

8 Data Bits, Odd Parity, 1 Stop Bit



W0F2909

8 Data Bits, No Parity, 2 Stop Bits



W0F290F

8 Data Bits, Even Parity, 2 Stop Bits



W0F290D

8 Data Bits, Odd Parity, 2 Stop Bits



W082900

7 Data Bits



W010F00

Exit Setup



W010F01

** Enter Setup



W0F2906

7 Data Bits, Even Parity, 1 Stop Bit



W0F2904

7 Data Bits, Odd Parity, 1 Stop Bit



W0F2907

7 Data Bits, Even Parity, 2 Stop Bits



W0F2905

7 Data Bits, Odd Parity, 2 Stop Bits



W010F00

Exit Setup



W010F01

** Enter Setup

USB Interface

USB HID-KBW

When enabled, the engine's transmission is simulated as USB keyboard input. It works on a Plug and Play basis and no driver is required.



W070901

** USB HID-KBW



W010F00

Exit Setup



W010F01

** Enter Setup

Standard Keyboard



W031A00

** Standard Keyboard

Emulate ALT+Keypad

When **Emulate ALT+Keypad** is enabled, any ASCII character (0x00 - 0xFF) is sent over the numeric keypad no matter which keyboard type is selected. Since sending a character involves multiple keystroke emulations, this method appears less efficient.

1. ALT Make
2. Enter the number corresponding to the ASCII character on the keypad.
3. ALT Break



W031A03

Emulate ALT+Keypad

Note: It is recommended to turn on the Num Lock light on the host when using this feature.



W010F00

Exit Setup



W010F01

** Enter Setup

Function Key Mapping

When **Function Key Mapping** is enabled, function character (0x00 - 0x1F) are sent as ASCII sequences over the numeric keypad.

1. CTRL Make
2. Press function key (Refer to the **ASCII Function Key Mapping Table** on the following page)
3. CTRL Break



W031A01

Function Key Mapping



W010F00

Exit Setup



W010F01

** Enter Setup

ASCII Function Key Mapping Table

ASCII Value (HEX)	Function Key	ASCII Value (HEX)	Function Key
00	2	10	P
01	A	11	Q
02	B	12	R
03	C	13	S
04	D	14	T
05	E	15	U
06	F	16	V
07	G	17	W
08	H	18	X
09	I	19	Y
0A	J	1A	Z
0B	K	1B	[
0C	L	1C	\
0D	M	1D]
0E	N	1E	6
0F	O	1F	.



W010F00

Exit Setup



W010F01

** Enter Setup

USB Country Keyboard Types

Keyboard layouts vary from country to country. All supported keyboard types are listed below.



WFF1900

** 1 - U.S.



WFF1901

2 - Belgium



WFF1902

3 - Brazil



WFF1903

4 - Canada



WFF1904

5 - Czech



WFF1905

6 - Denmark



WFF1906

7 - Finland



WFF1907

8 - France



W010F00

Exit Setup



W010F01

** Enter Setup



WFF1908

9 - Austria



WFF1909

10 - Greece



WFF190A

11 - Hungary



WFF190B

12 - Israel



WFF190C

13 - Italy



WFF190D

14 - Latin America



WFF190E

15 - Netherland



WFF190F

16 - Norway



WFF1910

17 - Poland



WFF1911

18 - Portugal



W010F00

Exit Setup



W010F01

** Enter Setup



WFF1912

19 - Romania



WFF1913

20 - Russia



WFF1915

21 - Slovakia



WFF1916

22 - Spain



WFF1917

23 - Sweden



WFF1918

24 - Switzerland



WFF1919

25 - Turkey1



WFF191A

26 - Turkey 2



WFF191B

27 - UK



WFF191C

28 - Japan



W010F00

Exit Setup



W010F01

** Enter Setup

Inter-Keystroke Delay

This parameter specifies the delay between emulated keystrokes.



WC01A00

** No Delay



WC01A40

Short Delay (5ms)



WC01A80

Medium Delay (10ms)



WC01AC0

Long Delay (15ms)



W010F00

Exit Setup



W010F01

** Enter Setup

Convert Case

This parameter is valid when the **Standard Keyboard** or **Function Key Mapping** is enabled.



W381A00

** No Case Conversion



W381A20

Convert All to Upper Case



W381A30

Convert All to Lower Case



W381A08

Invert Upper and Lower Case Characters

Example: When the **Invert Upper and Lower Case Characters** feature is enabled, barcode data “AbC” is transmitted as “aBc”.



W010F00

Exit Setup



W010F01

** Enter Setup

Emulate Numeric Keypad

When this feature is disabled, sending barcode data is emulated as keystroke(s) on main keyboard.

To enable this feature, scan the **Emulate Numeric Keypad** barcode. Sending a number (0-9) is emulated as keystroke on numeric keypad, whereas sending other character like "+", "_", "*", "/" and "." is still emulated as keystroke on main keyboard. However, this feature is influenced by the state of the Num Lock key on the host: if the Num Lock light on the host is ON, numbers are sent over numeric keypad, if it is OFF, numbers are sent over main keyboard.



W041A04

Emulate Numeric Keypad



W041A00

** Do Not Emulate Numeric Keypad

Note: Make sure the Num Lock light of the Host is turned ON when using this feature.

Emulate ALT+Keypad ON prevails over **Emulate Numeric Keypad**.



W010F00

Exit Setup



W010F01

** Enter Setup

USB DataPipe

A driver is required when using this protocol to communicate with the engine.



W070900

USB DataPipe

USB COM Port Emulation

This feature allows the host to receive data in the way as a serial port does. However, you need to set communication parameters on the engine to match the Host requirements. A driver is required for this feature.



W070902

USB COM Port Emulation



W010F00

Exit Setup



W010F01

** Enter Setup

HID-POS

The HID-POS interface is recommended for new application programs. It can send up to 56 characters in a single USB report and appears more efficient than USB HID-KBW.

Features:

- ✧ HID based, no custom driver required.
- ✧ Way more efficient in communication than USB HID-KBW and traditional RS-232 interface.

Note: HID-POS does not require a custom driver. However, a HID interface on Windows 98 does. All HID interfaces employ standard driver provided by the operating system. Use defaults when installing the driver.



W070903

HID-POS



W010F00

Exit Setup



W010F01

** Enter Setup

Access the Engine with Your Program

1. Use CreateFile to access the engine as a HID device.
2. Use ReadFile to deliver the scanned data to the application program.
3. Use WriteFile to send data to the engine.

For detailed information about USB and HID interfaces, go to www.USB.org.

Acquire Scanned Data

After a barcode is decoded, the engine sends an input report as below:

Byte	Bit							
	7	6	5	4	3	2	1	0
0	Report ID = 02							
1	Barcode Length							
2-57	Decoded Data (1-56)							
58-61	Reserved (1-4)							
62	00							
63	00 (no data continued) or 01 (data continued)							

VID/PID

USB uses VID (Vendor ID) and PID (Product ID) to identify and locate a device. The VID is assigned by USB Implementers Forum. Newland's vendor ID is 1EAB (Hex). A range of PIDs are used for each Newland product family. Every PID contains a base number and interface type (keyboard, COM port, etc.).

Product	Interface	PID (Hex)	PID (Dec)
EM1365-LD	USB DataPipe	8001	32769
	USB HID-KBW	8003	32771
	USB COM Port Emulation	8006	32774
	HID-POS	8010	32784



W010F00

Exit Setup



W010F01

** Enter Setup

Chapter 5 Data Formatting

Introduction

After a successful barcode read, a string containing numbers, letters or symbols will be returned.

In real applications, barcode data may be found insufficient for your needs. You may wish to include additional information such as barcode type, data acquisition time or delimiter in data being scanned.

Adding extra information to printed barcodes does not seem like a sensible solution since that will increase the barcode size and make them inflexible. Instead, we come up with the idea of appending prefix and suffix to the data without making any change to barcodes. We will show you how to conduct the configuration in the following sections.

Note: Customized data: <Prefix> <Data><Suffix><Terminating Character>



W010F00

Exit Setup



W010F01

** Enter Setup

Prefix Sequence



W013100

** Code ID+Custom+AIM ID



W013101

Custom+Code ID+ AIM ID



W010F00

Exit Setup



W010F01

** Enter Setup

Custom Prefix

Enable/Disable Custom Prefix

If custom prefix is enabled, you are allowed to append to the data a user-defined prefix that cannot exceed 5 characters.

For example, if barcode data is “123” and custom prefix is “AB”, the host will receive “AB123”.



W043104

Enable Custom Prefix



W043100

** Disable Custom Prefix

Set Custom Prefix

To set a custom prefix, scan the **Set Custom Prefix** barcode, the numeric barcodes corresponding to the hexadecimal value of a desired prefix and the **Save** barcode.

Note: A custom prefix cannot exceed 5 characters.



M000100

Set Custom Prefix

Example: Set the custom prefix to “CODE” (its hexadecimal value is 0x43/0x4F/0x44/0x45)

1. Scan the **Enter Setup** barcode.
2. Scan the **Set Custom Prefix** barcode.
3. Scan the numeric barcodes “4”, “3”, “4”, “F”, “4”, “4”, “4” and “5”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Enable Custom Prefix** barcode.
6. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

AIM ID Prefix

AIM (Automatic Identification Manufacturers) ID defines symbology identifier (For the details, see the **AIM ID Table** section in Appendix). If AIM ID prefix is enabled, the engine will add the symbology identifier before the scanned data after decoding.



W186018

Enable AIM ID Prefix



W186000

** Disable AIM ID Prefix



W010F00

Exit Setup



W010F01

** Enter Setup

CODE ID Prefix

Code ID can also be used to identify barcode type. Unlike AIM ID, Code ID is user programmable. For the information of default Code ID, see the **Code ID Table** section in Appendix.



W023102

Enable CODE ID Prefix



W023100

** Disable CODE ID Prefix

Restore All Default Code IDs



WFFD9C2

Restore All Default Code IDs

Set Code ID

Code ID can only consist of one or two English letters. To set a Code ID, scan a **Set Code ID** barcode, the numeric barcodes corresponding to the hexadecimal value of a desired ID and the **Save** barcode.

Example: Set the Code ID of Code 128 to “p” (its hexadecimal value is 0x70)

1. Scan the **Enter Setup** barcode.
2. Scan the **Set Code 128 Code ID** barcode. (See the barcode on the following page)
3. Scan the numeric barcodes “7” and “0”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

Set Code ID Barcodes



M000200

Set Code 128 Code ID



M000201

Set UCC/EAN-128 Code ID



M000202

Set AIM 128 Code ID



M000204

Set EAN-8 Code ID



M000205

Set EAN-13 Code ID



M000206

Set ISSN Code ID



M000207

Set ISBN Code ID



M000208

Set UPC-E Code ID



W010F00

Exit Setup



W010F01

** Enter Setup

Set Code ID Barcodes (continued)



M000209

Set UPC-A Code ID



M00020A

Set Interleaved 2 of 5 Code ID



M00020B

Set ITF-6 Code ID



M00020C

Set ITF-14 Code ID



M00020D

Set Deutsche 14 Code ID



M00020E

Set Deutsche 12 Code ID



M00020F

Set Matrix 2 of 5 Code ID



M000210

Set Industrial 25 Code ID



W010F00

Exit Setup



W010F01

** Enter Setup

Set Code ID Barcodes (continued)



M000211

Set Standard 25 Code ID



M000212

Set Code 39 Code ID



M000213

Set Codabar Code ID



M000214

Set Code 93 Code ID



M000215

Set Code 11 Code ID



M000216

Set Plessey Code ID



M000217

Set MSI-Plessey Code ID



 
M000218

Set RSS-14 Code ID



M000219

Set RSS-Limited Code ID



M00021A

Set RSS-Expand Code ID



W010F00

Exit Setup



W010F01

** Enter Setup

Custom Suffix

Enable/Disable Custom Suffix

If custom suffix is enabled, you are allowed to append to the data a user-defined suffix that cannot exceed 5 characters.

For example, if barcode data is “123” and custom suffix is “AB”, the host will receive “123AB”.



W083108

Enable Custom Suffix



W083100

** Disable Custom Suffix



W010F00

Exit Setup



W010F01

** Enter Setup

Set Custom Suffix

To set a custom suffix, scan the **Set Custom Suffix** barcode, the numeric barcodes corresponding to the hexadecimal value of a desired suffix and the **Save** barcode.

Note: A custom suffix cannot exceed 5 characters.



M000101

Set Custom Suffix

Example: Set the custom suffix to “CODE” (its hexadecimal value is 0x43/0x4F/0x44/0x45)

1. Scan the **Enter Setup** barcode.
2. Scan the **Set Custom Suffix** barcode.
3. Scan the numeric barcodes “4”, “3”, “4”, “F”, “4”, “4”, “4” and “5”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Enable Custom Suffix** barcode.
6. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

Terminating Character Suffix

A terminating character, such as carriage return (CR) and line feed (LF), can be used to mark the end of data, which means nothing can be added after it.

A terminating character suffix cannot exceed 5 characters.

Enable/Disable Terminating Character Suffix

This parameter determines whether to append predefined terminating character suffix to the data.



W103110

** Enable Terminating Character Suffix



W103100

Disable Terminating Character Suffix



W010F00

Exit Setup



W010F01

** Enter Setup

Set Terminating Character Suffix

The engine provides a shortcut for setting the terminating character suffix to **0x0D (CR)** or **0x0D,0x0A (CRLF)** or **0x09 (Horizontal Tab)**, and enabling it by scanning the appropriate barcode below.



WFFD9C3

Terminating Character 0x0D



WFFD9C4

** Terminating Character 0x0D,0x0A



WFFD9C5

Terminating Character 0x09



M000102

Set Terminating Character Suffix

To set other terminating character suffix, scan the **Set Terminating Character Suffix** barcode, the numeric barcodes corresponding to the hexadecimal value of a desired terminating character, and the **Save** barcode.

Note: A terminating character suffix cannot exceed 5 characters.

Example: Set the terminating character suffix to 0x0A (LF)

1. Scan the **Enter Setup** barcode.
2. Scan the **Set Terminating Character Suffix** barcode.
3. Scan the numeric barcodes "0" and "A". (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Enable Terminating Character Suffix** barcode.
6. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

Chapter 7 Symbologies

Introduction

Every symbology (barcode type) has its own unique attributes. This chapter provides programming barcodes for configuring the engine so that it can identify various barcode symbologies. It is recommended to disable those that are rarely used in order to increase the efficiency of the engine.

Global Settings

Enable/Disable All Symbologies

If all symbologies are disabled, the engine can only identify programming barcodes.



WFFD981

Enable All Symbologies



WFFD982

Disable All Symbologies



W010F00

Exit Setup



W010F01

** Enter Setup

Code 128

Restore Factory Defaults



WFFD990

Restore the Factory Defaults of Code 128

Enable/Disable Code 128



W016101

** Enable Code 128



W016100

Disable Code 128



W010F00

Exit Setup



W010F01

** Enter Setup

Set Length Range for Code 128

The engine can be configured to only decode Code 128 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the engine only decodes Code 128 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Code 128 barcodes with that length are to be decoded.



M000301

Set the Minimum Length



M000300

Set the Maximum Length

Example: Set the engine to decode Code128 barcodes containing between 8 and 12 characters

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode "8". (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcodes "1" and "2".
7. Scan the **Save** barcode.
8. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

UCC/EAN-128

Restore Factory Defaults



WFFD991

Restore the Factory Defaults of UCC/EAN-128

Enable/Disable UCC/EAN-128



W036203

** Enable UCC/EAN-128



W036200

Disable UCC/EAN-128



W036201

Decode as Code 128



W010F00

Exit Setup



W010F01

** Enter Setup

Set Length Range for UCC/EAN-128

The engine can be configured to only decode UCC/EAN-128 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the engine only decodes UCC/EAN-128 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only UCC/EAN-128 barcodes with that length are to be decoded.



M000303

Set the Minimum Length



M000302

Set the Maximum Length

Example: Set the engine to decode UCC/EAN-128 barcodes containing between 8 and 12 characters

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcodes “1” and “2”.
7. Scan the **Save** barcode.
8. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

AIM 128

Restore Factory Defaults



WFFD992

Restore the Factory Defaults of AIM 128

Enable/Disable AIM 128



W036302

Enable AIM 128



W036300

** Disable AIM 128



W036301

Decode as Code 128



W010F00

Exit Setup



W010F01

** Enter Setup

Set Length Range for AIM 128

The engine can be configured to only decode AIM 128 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the engine only decodes AIM 128 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only AIM 128 barcodes with that length are to be decoded.



M000305

Set the Minimum Length



M000304

Set the Maximum Length

Example: Set the engine to decode AIM128 barcodes containing between 8 and 12 characters

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcodes “1” and “2”.
7. Scan the **Save** barcode.
8. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

EAN-8

Restore Factory Defaults



WFFD994

Restore the Factory Defaults of EAN-8

Enable/Disable EAN-8



W016501

** Enable EAN-8



W016500

Disable EAN-8

Transmit Check Digit

EAN-8 is 8 digits in length with the last one as its check digit used to verify the integrity of the data.



W046504

** Transmit EAN-8 Check Digit



W046500

Do Not Transmit EAN-8 Check Digit



W010F00

Exit Setup



W010F01

** Enter Setup

Add-On Code

An EAN-8 barcode can be augmented with a two-digit or five-digit add-on code to form a new one. In the examples below, the part surrounded by blue dotted line is an EAN-8 barcode while the part circled by red dotted line is add-on code.



W106510

Enable 2-Digit Add-On Code



W106500

** Disable 2-Digit Add-On Code



W206520

Enable 5-Digit Add-On Code



W206500

** Disable 5-Digit Add-On Code

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The engine decodes a mix of EAN-8 barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes EAN-8 and ignores the add-on code when presented with an EAN-8 plus add-on barcode. It can also decode EAN-8 barcodes without add-on codes.



W010F00

Exit Setup



W010F01

** Enter Setup

Add-On Code Required

This parameter is only valid when **Enable 2-Digit Add-On Code** and/or **Enable 5-Digit Add-On Code** is selected.



W086508

EAN-8 Add-On Code Required



W086500

** EAN-8 Add-On Code Not Required

EAN-8 Extension

Disable EAN-8 Zero Extend: Transmit EAN-8 barcodes as is.

Enable EAN-8 Zero Extend: Add five leading zeros to decoded EAN-8 barcodes to extend to 13 digits.

Convert EAN-8 to EAN-13: Add five leading zeros to decoded EAN-8 barcodes to make them compatible in format to EAN-13 barcodes.



WC06540

Enable EAN-8 Zero Extend



WC06500

** Disable EAN-8 Zero Extend



WC06580

Convert EAN-8 to EAN-13



W010F00

Exit Setup



W010F01

** Enter Setup

EAN-13

Restore Factory Defaults



' WFFD995

Restore the Factory Defaults of EAN-13

Enable/Disable EAN-13



W016601

** Enable EAN-13



W016600

Disable EAN-13

Transmit Check Digit

EAN-13 is 13 digits in length with the last one as its check digit used to verify the integrity of the data.



W046604

** Transmit EAN-13 Check Digit



W046600

Do Not Transmit EAN-13 Check Digit



W010F00

Exit Setup




W010F01

** Enter Setup

Add-On Code

An EAN-13 barcode can be augmented with a two-digit or five-digit add-on code to form a new one. In the examples below, the part surrounded by blue dotted line is an EAN-13 barcode while the part circled by red dotted line is add-on code.

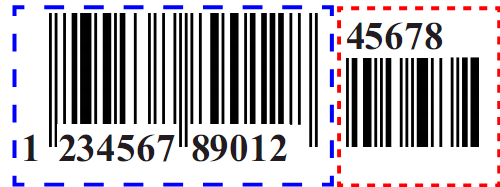

W106610

Enable 2-Digit Add-On Code



W106600

** Disable 2-Digit Add-On Code



W206620

Enable 5-Digit Add-On Code



W206600

** Disable 5-Digit Add-On Code

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The engine decodes a mix of EAN-13 barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes EAN-13 and ignores the add-on code when presented with an EAN-13 plus add-on barcode. It can also decode EAN-13 barcodes without add-on codes.



W010F00

Exit Setup



W010F01

** Enter Setup

Add-On Code Required

This parameter is only valid when **Enable 2-Digit Add-On Code** and/or **Enable 5-Digit Add-On Code** is selected.



W086608

EAN-13 Add-On Code Required



W086600

** EAN-13 Add-On Code Not Required



W010F00

Exit Setup



W010F01

** Enter Setup

ISSN

Restore Factory Defaults



WFFD996

Restore the Factory Defaults of ISSN

Enable/Disable ISSN



W036702

Enable ISSN



W036700

** Disable ISSN



W036701

Decode as EAN-13



W010F00

Exit Setup



W010F01

** Enter Setup

ISBN

Restore Factory Defaults



WFFD997

Restore the Factory Defaults of ISBN

Enable/Disable ISBN



W036802

Enable ISBN



W036800

** Disable ISBN



W036801

Decode as EAN-13



W010F00

Exit Setup



W010F01

** Enter Setup

Set ISBN Format



W086800

** ISBN-13



W086808

ISBN-10



W010F00

Exit Setup



W010F01

** Enter Setup

UPC-E

Restore Factory Defaults



WFFD998

Restore the Factory Defaults of UPC-E

Enable/Disable UPC-E



W016901

** Enable UPC-E



W016900

Disable UPC-E

Transmit Check Digit

UPC-E is 8 digits in length with the last one as its check digit used to verify the integrity of the data.



W046904

** Transmit UPC-E Check Digit



W046900

Do Not Transmit UPC-E Check Digit



W010F00

Exit Setup



W010F01

** Enter Setup

Add-On Code

A UPC-E barcode can be augmented with a two-digit or five-digit add-on code to form a new one. In the examples below, the part surrounded by blue dotted line is a UPC-E barcode while the part circled by red dotted line is add-on code.



W106910

Enable 2-Digit Add-On Code



W106900

** Disable 2-Digit Add-On Code



W206920

Enable 5-Digit Add-On Code



W206900

** Disable 5-Digit Add-On Code

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The engine decodes a mix of UPC-E barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes UPC-E and ignores the add-on code when presented with a UPC-E plus add-on barcode. It can also decode UPC-E barcodes without add-on codes.



W010F00

Exit Setup



W010F01

** Enter Setup

Add-On Code Required

This parameter is only valid when **Enable 2-Digit Add-On Code** and/or **Enable 5-Digit Add-On Code** is selected.



W086908

UPC-E Add-On Code Required



W086900

** UPC-E Add-On Code Not Required

Transmit System Character

The first character of UPC-E barcode is the system character.



W306A10

Do Not Transmit System Character



W306A20

** Transmit System Character



W010F00

Exit Setup



W010F01

** Enter Setup

UPC-E Extension

Disable UPC-E Extend: Transmit UPC-E barcodes as is.

Enable UPC-E Extend: Extend UPC-E barcodes to make them compatible in length to UPC-A.

Convert UPC-E to UPC-A: Extend UPC-E barcodes to make them compatible in format to UPC-A.



WC06940

Enable UPC-E Extend



WC06900

**Disable UPC-E Extend



WC06980

Convert UPC-E to UPC-A



W010F00

Exit Setup



W010F01

** Enter Setup

UPC-A

Restore Factory Defaults



WFFD999

Restore the Factory Defaults of UPC-A

Enable/Disable UPC-A



W036B02

** Enable UPC-A



W036B00

Disable UPC-A



W036B01

Decode as EAN-13



W010F00

Exit Setup



W010F01

** Enter Setup

Transmit Check Digit

UPC-A is 13 digits in length with the last one as its check digit used to verify the integrity of the data.



W086B08

** Transmit UPC-A Check Digit



W086B00

Do Not Transmit UPC-A Check Digit

Transmit Preamble Character

Preamble characters (Country Code and System Character) can be transmitted as part of a UPC-A barcode. Select one of the following options for transmitting UPC-A preamble to the host device: transmit system character only, transmit system character and country code ("0" for USA), or transmit no preamble.



W036A00

No Preamble



W036A01

** System Character



W036A02

System Character & Country Code



W010F00

Exit Setup



W010F01

** Enter Setup

Add-On Code

A UPC-A barcode can be augmented with a two-digit or five-digit add-on code to form a new one. In the examples below, the part surrounded by blue dotted line is a UPC-A barcode while the part circled by red dotted line is add-on code.



W206B20

Enable 2-Digit Add-On Code



W206B00

** Disable 2-Digit Add-On Code



W406B40

Enable 5-Digit Add-On Code



W406B00

** Disable 5-Digit Add-On Code

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The engine decodes a mix of UPC-A barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes UPC-A and ignores the add-on code when presented with a UPC-A plus add-on barcode. It can also decode UPC-A barcodes without add-on codes.



W010F00

Exit Setup



W010F01

** Enter Setup

Add-On Code Required

This parameter is only valid when **Enable 2-Digit Add-On Code** and/or **Enable 5-Digit Add-On Code** is selected.



W106B10

UPC-A Add-On Code Required



W106B00

** UPC-A Add-On Code Not Required



W010F00

Exit Setup



W010F01

** Enter Setup

Interleaved 2 of 5

Restore Factory Defaults



WFFD99A

Restore the Factory Defaults of Interleaved 2 of 5

Enable/Disable Interleaved 2 of 5



W016C01

** Enable Interleaved 2 of 5



W016C00

Disable Interleaved 2 of 5



W010F00

Exit Setup



W010F01

** Enter Setup

Check Digit Verification

A check digit is optional for Interleaved 2 of 5 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

Disable: The engine transmits Interleaved 2 of 5 barcodes as is.

Do Not Transmit Check Digit After Verification: The engine checks the integrity of all Interleaved 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Digit After Verification: The engine checks the integrity of all Interleaved 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



W0C6C00

Disable



W0C6C04

** Do Not Transmit Check Digit After Verification



W0C6C0C

Transmit Check Digit After Verification



W010F00

Exit Setup



W010F01

** Enter Setup

Set Length Range for Interleaved 2 of 5

The engine can be configured to only decode Interleaved 2 of 5 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the engine only decodes Interleaved 2 of 5 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Interleaved 2 of 5 barcodes with that length are to be decoded.



M000307

Set the Minimum Length



M000306

Set the Maximum Length

Example: Set the engine to decode Interleaved 2 of 5 barcodes containing between 8 and 12 characters

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode "8". (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcodes "1" and "2".
7. Scan the **Save** barcode.
8. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

ITF-6

ITF-6 is a special kind of Interleaved 2 of 5 with a length of 6 characters and the last character as the check character.

Restore Factory Defaults



WFFD99B

Restore the Factory Defaults of ITF-6

Enable/Disable ITF-6

By default, ITF-6 is decoded as Interleaved 2 of 5.



W036D01

Disable ITF-6



W0B6D02

Enable ITF-6 But Do Not Transmit Check Digit



W0B6D0A

Enable ITF-6 and Transmit Check Digit

Note: It is advised not to enable ITF-6 and Interleaved 2 of 5 at the same time.



W010F00

Exit Setup



W010F01

** Enter Setup

ITF-14

ITF-14 is a special kind of Interleaved 2 of 5 with a length of 14 characters and the last character as the check character.

Restore Factory Defaults



WFFD99C

Restore the Factory Defaults of ITF-14

Enable/Disable ITF-14

By default, ITF-14 is decoded as Interleaved 2 of 5.



W036E01

Disable ITF-14



W0B6E02

Enable ITF-14 But Do Not Transmit Check Digit



W0B6E0A

Enable ITF-14 and Transmit Check Digit

Note: It is advised not to enable ITF-14 and Interleaved 2 of 5 at the same time.



W010F00

Exit Setup



W010F01

** Enter Setup

Deutsche 14

Restore Factory Defaults



WFFD99D

Restore the Factory Defaults of Deutsche 14

Enable/Disable Deutsche 14

By default, Deutsche 14 is decoded as Interleaved 2 of 5.



W036F01

Disable Deutsche 14



W0B6F02

Enable Deutsche 14 But Do Not Transmit Check Digit



W0B6F0A

Enable Deutsche 14 and Transmit Check Digit

Note: It is advised not to enable Deutsche 14 unless necessary, because Deutsche 14, ITF-14 and Interleaved 2 of 5 use the same encoding method and enabling them at the same time can easily cause confusion with each other when decoding.



W010F00

Exit Setup



W010F01

** Enter Setup

Deutsche 12

Restore Factory Defaults



WFFD99E

Restore the Factory Defaults of Deutsche 12

Enable/Disable Deutsche 12

By default, Deutsche 12 is decoded as Interleaved 2 of 5.



W037001

Disable Deutsche 12



W0B7002

Enable Deutsche 12 But Do Not Transmit Check Digit



W0B700A

Enable Deutsche 12 and Transmit Check Digit

Note: It is advised not to enable Deutsche 12 unless necessary, because Deutsche 12, ITF-12 and Interleaved 2 of 5 use the same encoding method and enabling them at the same time can easily cause confusion with each other when decoding.



W010F00

Exit Setup



W010F01

** Enter Setup

Matrix 2 of 5 (European Matrix 2 of 5)

Restore Factory Defaults



WFFD99F

Restore the Factory Defaults of Matrix 2 of 5

Enable/Disable Matrix 2 of 5



W017101

** Enable Matrix 2 of 5



W017100

Disable Matrix 2 of 5



W010F00

Exit Setup



W010F01

** Enter Setup

Check Digit Verification

A check digit is optional for Matrix 2 of 5 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

Disable: The engine transmits Matrix 2 of 5 barcodes as is.

Do Not Transmit Check Digit After Verification: The engine checks the integrity of all Matrix 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Digit After Verification: The engine checks the integrity of all Matrix 2 of 5 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



W0C7100

** Disable



W0C7104

Do Not Transmit Check Digit After Verification



W0C710C

Transmit Check Digit After Verification



W010F00

Exit Setup



W010F01

** Enter Setup

Set Length Range for Matrix 2 of 5

The engine can be configured to only decode Matrix 2 of 5 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the engine only decodes Matrix 2 of 5 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Matrix 2 of 5 barcodes with that length are to be decoded.



M000309

Set the Minimum Length



M000308

Set the Maximum Length

Example: Set the engine to decode Matrix 2 of 5 barcodes containing between 8 and 12 characters

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode "8". (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcodes "1" and "2".
7. Scan the **Save** barcode.
8. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

Industrial 25

Restore Factory Defaults



WFFD9A0

Restore the Factory Defaults of Industrial 25

Enable/Disable Industrial 25



W017201

** Enable Industrial 25



W017200

Disable Industrial 25



W010F00

Exit Setup



W010F01

** Enter Setup

Check Digit Verification

A check digit is optional for Industrial 25 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

Disable: The engine transmits Industrial 25 barcodes as is.

Do Not Transmit Check Digit After Verification: The engine checks the integrity of all Industrial 25 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Digit After Verification: The engine checks the integrity of all Industrial 25 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



W0C7200

** Disable



W0C7204

Do Not Transmit Check Digit After Verification



W0C720C

Transmit Check Digit After Verification



W010F00

Exit Setup



W010F01

** Enter Setup

Set Length Range for Industrial 25

The engine can be configured to only decode Industrial 25 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the engine only decodes Industrial 25 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Industrial 25 barcodes with that length are to be decoded.



M00030B

Set the Minimum Length



M00030A

Set the Maximum Length

Example: Set the engine to decode Industrial 25 barcodes containing between 8 and 12 characters

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcodes “1” and “2”.
7. Scan the **Save** barcode.
8. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

Standard 25

Restore Factory Defaults



WFFD9A1

Restore the Factory Defaults of Standard 25

Enable/Disable Standard 25



W017301

** Enable Standard 25



W017300

Disable Standard 25



W010F00

Exit Setup



W010F01

** Enter Setup

Check Digit Verification

A check digit is optional for Standard 25 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

Disable: The engine transmits Standard 25 barcodes as is.

Do Not Transmit Check Digit After Verification: The engine checks the integrity of all Standard 25 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Digit After Verification: The engine checks the integrity of all Standard 25 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



W0C7300

** Disable



W0C7304

Do Not Transmit Check Digit After Verification



W0C730C

Transmit Check Digit After Verification



W010F00

Exit Setup



Set Length Range for Standard 25

The engine can be configured to only decode Standard 25 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the engine only decodes Standard 25 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Standard 25 barcodes with that length are to be decoded.



Set the Minimum Length



Set the Maximum Length

Example: Set the engine to decode Standard 25 barcodes containing between 8 and 12 characters

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcodes “1” and “2”.
7. Scan the **Save** barcode.
8. Scan the **Exit Setup** barcode.





W010F01

** Enter Setup

Code 39

Restore Factory Defaults



WFFD9A2

Restore the Factory Defaults of Code 39

Enable/Disable Code 39



W017401

** Enable Code 39



W017400

Disable Code 39



W010F00

Exit Setup



W010F01

** Enter Setup

Check Digit Verification

A check digit is optional for Code 39 and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

Disable: The engine transmits Code 39 barcodes as is.

Do Not Transmit Check Digit After Verification: The engine checks the integrity of all Code 39 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Digit After Verification: The engine checks the integrity of all Code 39 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



W187400

** Disable



W187408

Do Not Transmit Check Digit After Verification



W187418

Transmit Check Digit After Verification



W010F00

Exit Setup



W010F01

** Enter Setup

Transmit Start/Stop Characters

Code 39 uses an asterisk (*) for both the start and the stop characters. You can choose whether or not to transmit the start/stop characters by scanning the appropriate barcode below.



W047404

Transmit Start/Stop Characters



W047400

** Do Not Transmit Start/Stop Characters

Enable/Disable Code 39 Full ASCII

The engine can be configured to identify all ASCII characters by scanning the appropriate barcode below.



W207420

** Enable Code 39 Full ASCII



W207400

Disable Code 39 Full ASCII



W010F00

Exit Setup



W010F01

** Enter Setup

Set Length Range for Code 39

The engine can be configured to only decode Code 39 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the engine only decodes Code 39 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Code 39 barcodes with that length are to be decoded.



M00030F

Set the Minimum Length



MM00030E

Set the Maximum Length

Example: Set the engine to decode Code 39 barcodes containing between 8 and 12 characters.

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode "8". (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode "1".
7. Scan the numeric barcode "2".
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

Codabar

Restore Factory Defaults



WFFD9A3

Restore the Factory Defaults of Codabar

Enable/Disable Codabar



W017501

** Enable Codabar



W017500

Disable Codabar



W010F00

Exit Setup



W010F01

** Enter Setup

Check Digit Verification

A check digit is optional for Codabar and can be added as the last digit. It is a calculated value used to verify the integrity of the data.

Disable: The engine transmits Codabar barcodes as is.

Do Not Transmit Check Digit After Verification: The engine checks the integrity of all Codabar barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Digit After Verification: The engine checks the integrity of all Codabar barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



W607500

** Disable



W607520

Do Not Transmit Check Digit After Verification



W607560

Transmit Check Digit After Verification



W010F00

Exit Setup



W010F01

** Enter Setup

Start/Stop Characters



W047504

** Transmit Start/Stop Characters



W047500

Do Not Transmit Start/Stop Characters



W187500

** ABCD/ABCD as the Start/Stop Character



W187508

ABCD/TN*E as the Start/Stop Character



W187510

abcd/abcd as the Start/Stop Character



W187518

abcd/tn*e as the Start/Stop Character



W010F00

Exit Setup



W010F01

** Enter Setup

Set Length Range for Codabar

The engine can be configured to only decode Codabar barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the engine only decodes Codabar barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Codabar barcodes with that length are to be decoded.



M000311

Set the Minimum Length



M000310

Set the Maximum Length

Example: Set the engine to decode Codabar barcodes containing between 8 and 12 characters.

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode "8". (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode "1".
7. Scan the numeric barcode "2".
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

Code 93

Restore Factory Defaults



WFFD9A4

Restore the Factory Defaults of Code 93

Enable/Disable Code 93



W017601

** Enable Code 93



W017600

Disable Code 93



W010F00

Exit Setup



W010F01

** Enter Setup

Check Digit Verification

Check digits are optional for Code 93 and can be added as the last two digits, which are calculated values used to verify the integrity of the data.

Disable: The engine transmits Code 93 barcodes as is.

Do Not Transmit Check Digit After Verification: The engine checks the integrity of all Code 93 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the checks will be transmitted except the last two digits, whereas those failing them will not be transmitted.

Transmit Check Digit After Verification: The engine checks the integrity of all Code 93 barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the checks will be transmitted, whereas those failing them will not be transmitted.



W0C7600

Disable



W0C7604

** Do Not Transmit Check Digit After Verification



W0C760C

Transmit Check Digit After Verification



W010F00

Exit Setup



W010F01

** Enter Setup

Set Length Range for Code 93

The engine can be configured to only decode Code 93 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the engine only decodes Code 93 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Code 93 barcodes with that length are to be decoded.



M000313

Set the Minimum Length



M000312

Set the Maximum Length

Example: Set the engine to decode Code 93 barcodes containing between 8 and 12 characters.

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode "8". (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode "1".
7. Scan the numeric barcode "2".
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

Code 11

Restore Factory Defaults



WFFD9A5

Restore the Factory Defaults of Code 11

Enable/Disable Code 11



W017701

Enable Code 11



W017700

** Disable Code 11



W010F00

Exit Setup



W010F01

** Enter Setup

Check Digit Verification

 
Check digits are optional for Code 11 and can be added as the last one or two digits, which are calculated values used to verify the integrity of the data.

If the **Disable** option is enabled, the engine transmits Code 11 barcodes as is.



W1C7700

Disable



W1C7704

** One Check Digit, MOD11



W1C7708

Two Check Digits, MOD11/MOD11



W1C770C

Two Check Digits, MOD11/MOD9



W1C7710

One Check Digit, MOD11 (Len <= 11)
Two Check Digits, MOD11/MOD11 (Len > 11)



W1C7714

One Check Digit, MOD11 (Len <= 11)
Two Check Digits, MOD11/MOD9 (Len > 11)



W207720

Transmit Check Digit



W207700

** Do Not Transmit Check Digit



W010F00

Exit Setup



W010F01

** Enter Setup

Set Length Range for Code 11

The engine can be configured to only decode Code 11 barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the engine only decodes Code 11 barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Code 11 barcodes with that length are to be decoded.



M000315

Set the Minimum Length



M000314

Set the Maximum Length

Example: Set the engine to decode Code 11 barcodes containing between 8 and 12 characters.

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode "8". (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode "1".
7. Scan the numeric barcode "2".
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

Plessey

Restore Factory Defaults



WFFD9A6

Restore the Factory Defaults of Plessey

Enable/Disable Plessey



W017801

Enable Plessey



W017800

** Disable Plessey



W010F00

Exit Setup



W010F01

** Enter Setup

Check Digit Verification

Check digits are optional for Plessey and can be added as the last one or two digits, which are calculated values used to verify the integrity of the data.

Disable: The engine transmits Plessey barcodes as is.

Do Not Transmit Check Digit After Verification: The engine checks the integrity of all Plessey barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the checks will be transmitted except the last two digits, whereas those failing them will not be transmitted.

Transmit Check Digit After Verification: The engine checks the integrity of all Plessey barcodes to verify that the data complies with the check digit algorithm. Barcodes passing the checks will be transmitted, whereas those failing them will not be transmitted.



W0C7800

Disable



W0C7804

** Do Not Transmit Check Digit After Verification



W0C780C

Transmit Check Digit After Verification



W010F00

Exit Setup



W010F01

** Enter Setup

Set Length Range for Plessey

The engine can be configured to only decode Plessey barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the engine only decodes Plessey barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Plessey barcodes with that length are to be decoded.



M000317

Set the Minimum Length



M000316

Set the Maximum Length

Example: Set the engine to decode Plessey barcodes containing between 8 and 12 characters.

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

MSI-Plessey

Restore Factory Defaults



WFFD9A7

Restore the Factory Defaults of MSI-Plessey

Enable/Disable MSI-Plessey



W017901

Enable MSI-Plessey



W017900

** Disable MSI-Plessey



W010F00

Exit Setup



W010F01

** Enter Setup

Check Digit Verification

Check digits are optional for MSI-Plessey and can be added as the last one or two digits, which are calculated values used to verify the integrity of the data.

If the **Disable** option is enabled, the engine transmits MSI-Plessey barcodes as is.



W0C7900

Disable



W0C7904

** One Check Digit, MOD10



W0C7908

Two Check Digits, MOD10/MOD10



W0C790C

Two Check Digits, MOD10/MOD11



W107910

Transmit Check Digit



W107900

** Do Not Transmit Check Digit



W010F00

Exit Setup



W010F01

** Enter Setup

Set Length Range for MSI-Plessey

The engine can be configured to only decode MSI-Plessey barcodes with lengths that fall between (inclusive) the minimum and maximum lengths.

The supported maximum length is 255 characters. If minimum length is set to be greater than maximum length, the engine only decodes MSI-Plessey barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only MSI-Plessey barcodes with that length are to be decoded.



M000319

Set the Minimum Length



M000318

Set the Maximum Length

Example: Set the engine to decode MSI-Plessey barcodes containing between 8 and 12 characters.

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Minimum Length** barcode.
3. Scan the numeric barcode “8”. (See the **Digit Barcodes** section in Appendix)
4. Scan the **Save** barcode. (See the **Save/Cancel Barcodes** section in Appendix)
5. Scan the **Set the Maximum Length** barcode.
6. Scan the numeric barcode “1”.
7. Scan the numeric barcode “2”.
8. Scan the **Save** barcode.
9. Scan the **Exit Setup** barcode.



W010F00

Exit Setup



W010F01

** Enter Setup

RSS-14

Restore Factory Defaults



WFFD9A8

Restore the Factory Defaults of RSS-14

Enable/Disable RSS-14



W017A01

** Enable RSS-14



W017A00

Disable RSS-14

Transmit Application Identifier "01"



W047A04

** Transmit Application Identifier "01"



W047A00

Do Not Transmit Application Identifier "01"



W010F00

Exit Setup



W010F01

** Enter Setup

RSS-Limited

Restore Factory Defaults



WFFD9A9

Restore the Factory Defaults of RSS-Limited

Enable/Disable RSS-Limited



W017B01

** Enable RSS-Limited



W017B00

Disable RSS-Limited

Transmit Application Identifier "01"



W047B04

** Transmit Application Identifier "01"



W047B00

Do Not Transmit Application Identifier "01"



W010F00

Exit Setup



W010F01

** Enter Setup

RSS-Expand

Restore Factory Defaults



WFFD9AA

Restore the Factory Defaults of RSS-Expand

Enable/Disable RSS-Expand



W017C01

** Enable RSS-Expand



W017C00

Disable RSS-Expand



W010F00

Exit Setup

Appendix

Factory Defaults Table

Parameter		Factory Default	Remark
System Settings			
Barcode Programming		Enabled	
Programming Barcode Data		Do not send	
Scan Mode		Manual Mode	
Manual Mode	Decode Session Timeout	15s	1-255s; 0: infinite.
Continuous Mode	Decode Session Timeout	15s	1-255s; 0: infinite.
	Timeout between Decodes	1.0s	0.0-25.5s
	Reread Same Barcode	With no delay	To disable rereads of same barcode, enable the Reread Same Barcode with a Delay and set the delay to 0.
Sense Mode	Decode Session Timeout	15s	1-255s; 0: infinite.
	Image Stabilization Timeout	0.4s	0.0-25.5s
	Reread Same Barcode	With no delay	To disable rereads of same barcode, enable the Reread Same Barcode with a Delay and set the delay to 0.
	Sensitivity	Medium	
Command Trigger Mode	Decode Session Timeout	15s	1-255s; 0: infinite.
Security Level		0	
Good Read Beep		Enabled	
Good Read Beep Frequency		Medium	
Good Read Beep Duration		80ms	
Decode Result Notification		Disabled	
Silent Mode		Disabled	Temporary setting
Illumination		On When Scanning	Temporary setting

Parameter		Factory Default	Remark
Communication Interfaces			
TTL-232 Interface	Baud Rate	9600	
	Parity Check	None	
	Number of Data Bits	8	
	Number of Stop Bits	1	
	Flow Control	None	
USB Interface		USB HID-KBW	Other options: DataPipe, USB COM Port Emulation, HID-POS
USB HID-KBW	Input Mode	Standard Keyboard	
	USB Country Keyboard Type	U.S.	
	Inter-Keystroke Delay	No Delay	
	Convert Case	No Conversion	
	Emulate Numeric Keypad	Disabled	
Data Formatting			
Prefix Sequence		Code ID+Custom+AIM ID	
AIM ID Prefix		Disabled	
Code ID Prefix		Disabled	1 or 2 English letters
Custom Prefix		Disabled	1 to 5 characters
Custom Suffix		Disabled	1 to 5 characters
Terminating Character Suffix		Enabled, 0x0D,0x0A	0x0D,0x0A: CRLF

Parameter	Factory Default	Remark
Code 128		
Code 128	Enabled	
Minimum Length	1	No less than 1 (including check digit)
Maximum Length	80	
UCC/EAN-128 (GS1-128)		
UCC/EAN-128	Enabled	
Minimum Length	1	No less than 1 (including check digit)
Maximum Length	80	
AIM 128		
AIM 128	Disabled	
Minimum Length	1	No less than 1 (including check digit)
Maximum Length	80	
EAN-8		
EAN-8	Enabled	
Check Digit	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
Extend to EAN-13	Disabled	
EAN-13		
EAN-13	Enabled	
Check Digit	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
ISSN		
ISSN	Disabled	
ISBN		
ISBN	Disabled	
ISBN Format	ISBN-13	

Parameter	Factory Default	Remark
UPC-E		
UPC-E	Enabled	
Check Digit	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
Extend to UPC-A	Disabled	
System Character	Transmit	
UPC-A		
UPC-A	Enabled	
Check Digit	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
Transmit Preamble Character	System character	
Interleaved 2 of 5		
Interleaved 2 of 5	Enabled	
Check Digit Verification	Enabled	
Check Digit	Do not transmit	
Minimum Length	6	No less than 3 (including check digit)
Maximum Length	100	
ITF-6		
ITF-6	Decode as I25	
Check Digit	Transmit	
ITF-14		
ITF-14	Decode as I25	
Check Digit	Transmit	
Deutsche 14		
Deutsche 14	Decode as I25	
Check Digit	Transmit	
Deutsche 12		
Deutsche 12	Decode as I25	
Check Digit	Transmit	

Parameter	Factory Default	Remark
Matrix 2 of 5		
Matrix 2 of 5	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Minimum Length	6	No less than 2 (including check digit)
Maximum Length	80	
Industrial 25		
Industrial 25	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Minimum Length	6	No less than 2 (including check digit)
Maximum Length	80	
Standard 25		
Standard 25	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Minimum Length	6	No less than 2 (including check digit)
Maximum Length	80	
Code 39		
Code 39	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Start/Stop Characters	Do not transmit	
Code 39 Full ASCII	Enabled	
Minimum Length	4	No less than 2 (including check digit)
Maximum Length	50	

Parameter	Factory Default	Remark
Codabar		
Codabar	Enabled	
Check Digit Verification	Disabled	
Check Digit	Do not transmit	
Start/Stop Characters	Transmit	
Start/Stop Character Format	ABCD/ABCD	
Minimum Length	4	No less than 1 (including check digit)
Maximum Length	60	
Code 93		
Code 93	Enabled	
Check Digit Verification	Enabled	
Check Digit	Do not transmit	
Minimum Length	2	No less than 1 (including check digit)
Maximum Length	80	
Code 11		
Code 11	Disabled	
Check Digit Verification	One check digit, MOD11	
Check Digit	Do not transmit	
Minimum Length	4	No less than 2 (including check digit)
Maximum Length	80	
Plessey		
Plessey	Disabled	
Check Digit Verification	Enabled	
Check Digit	Do not transmit	
Minimum Length	4	No less than 3 (including check digit)
Maximum Length	60	

Parameter	Factory Default	Remark
<i>MSI-Plessey</i>		
MSI-Plessey	Disabled	
Check Digit Verification	One check digit, MOD10	
Check Digit	Do not transmit	
Minimum Length	4	No less than 2 (including check digit)
Maximum Length	60	
<i>RSS-14</i>		
RSS-14	Enabled	
AI (Application Identifier)	Transmit	
<i>RSS-Limited</i>		
RSS-Limited	Enabled	
AI (Application Identifier)	Transmit	
<i>RSS-Expand</i>		
RSS-Expand	Enabled	

AIM ID Table

Symbology	AIM ID	Remark
Code 128]C0	Standard Code 128
UCC/EAN 128 (GS1-128)]C1	FNC1 is the character right after the start character
AIM 128]C2	FNC1 is the 2nd character after the start character
EAN-8]E4	Standard EAN-8
]E4....]E1...	EAN-8 + 2-Digit Add-On Code
]E4....]E2...	EAN-8 + 5-Digit Add-On Code
EAN-13]E0	Standard EAN-13
]E3	EAN-13 + 2/5-Digit Add-On Code
ISSN]X5	
ISBN]X4	
UPC-E]E0	Standard UPC-E
]E3	UPC-E + 2/5-Digit Add-On Code
UPC-A]E0	Standard UPC-A
]E3	UPC-A + 2/5-Digit Add-On Code
Interleaved 2 of 5]I0	No check digit verification
]I1	Transmit check digit after verification
]I3	Do not transmit check digit after verification
ITF-6]I1	Transmit check digit
]I3	Do not transmit check digit
ITF-14]I1	Transmit check digit
]I3	Do not transmit check digit
Deutsche 14 Deutsche 12]X0	
Matrix 2 of 5]X1	No check digit verification
]X2	Transmit check digit after verification
]X3	Do not transmit check digit after verification
Industrial 25]S0	Not specified
Standard 25]R0	No check digit verification
]R8	One check digit, MOD 7; do not transmit check digit

Symbology	AIM ID	Remark
	JR9	One check digit, MOD 7; transmit check digit
Code 39	JA0	Transmit barcodes as is; Full ASCII disabled; no check digit verification
	JA1	One check digit, MOD 43; transmit check digit
	JA3	One check digit, MOD 43; do not transmit check digit
	JA4	Full ASCII enabled; no check digit verification
	JA5	Full ASCII enabled; MOD43; transmit check digit
	JA7	Full ASCII enabled; MOD43; do not transmit check digit
	Codabar	JF0
JF1		ABC Codabar
JF2		Transmit check digit after verification
JF4		Do not transmit check digit after verification
Code 93	JG0	Not specified
Code 11	JH0	One check digit, MOD11; transmit check digit
	JH1	Two check digits, MOD11/MOD11; transmit check digit
	JH3	Do not transmit check digit after verification
	JH8	Two check digits, MOD11/MOD9; transmit check digit
	JH9	No check digit verification
Plessey	JP0	Not specified
MSI Plessey	JM0	One check digit, MOD10; transmit check digit
	JM1	One check digit, MOD10; do not transmit check digit
	JM7	Two check digits, MOD10 /MOD11; do not transmit check digit
	JM8	Two check digits, MOD10 /MOD11; transmit check digit
	JM9	No check digit verification
RSS-14/RSS-Limited RSS-Expand	Je0	Standard
	Je1	User-defined
	Je2	User-defined
	Je3	User-defined

Reference: ISO/IEC 15424:2008 Information technology – Automatic identification and data capture techniques – Data Carrier Identifiers (including Symbology Identifiers)

Code ID Table

Symbology	Code ID
Code 128	j
UCC/EAN-128	u
AIM 128	f
SETTING 128	t
EAN-8	g
EAN-13	d
ISSN	n
ISBN	B
UPC-E	h
UPC-A	c
Interleaved 2 of 5	e
ITF-6	r
ITF-14	q
Deutsche 14	w
Deutsche 12	l
Matrix 2 of 5(European Matrix 2 of 5)	v
Industrial 25	i
Standard 25	s
Code 39	b
Codabar	a
Code 93	y
Code 11	z
Plessey	p
MSI-Plessey	m
RSS-14	D
RSS-Limited	C
RSS-Expand	R

ASCII Table

Hex	Dec	Char
00	0	NUL (Null char.)
01	1	SOH (Start of Header)
02	2	STX (Start of Text)
03	3	ETX (End of Text)
04	4	EOT (End of Transmission)
05	5	ENQ (Enquiry)
06	6	ACK (Acknowledgment)
07	7	BEL (Bell)
08	8	BS (Backspace)
09	9	HT (Horizontal Tab)
0a	10	LF (Line Feed)
0b	11	VT (Vertical Tab)
0c	12	FF (Form Feed)
0d	13	CR (Carriage Return)
0e	14	SO (Shift Out)
0f	15	SI (Shift In)
10	16	DLE (Data Link Escape)
11	17	DC1 (XON) (Device Control 1)
12	18	DC2 (Device Control 2)
13	19	DC3 (XOFF) (Device Control 3)
14	20	DC4 (Device Control 4)
15	21	NAK (Negative Acknowledgment)
16	22	SYN (Synchronous Idle)
17	23	ETB (End of Trans. Block)
18	24	CAN (Cancel)
19	25	EM (End of Medium)
1a	26	SUB (Substitute)
1b	27	ESC (Escape)
1c	28	FS (File Separator)
1d	29	GS (Group Separator)

Hex	Dec	Char
1e	30	RS (Request to Send)
1f	31	US (Unit Separator)
20	32	SP (Space)
21	33	! (Exclamation Mark)
22	34	" (Double Quote)
23	35	# (Number Sign)
24	36	\$ (Dollar Sign)
25	37	% (Percent)
26	38	& (Ampersand)
27	39	` (Single Quote)
28	40	((Right / Closing Parenthesis)
29	41) (Right / Closing Parenthesis)
2a	42	* (Asterisk)
2b	43	+ (Plus)
2c	44	, (Comma)
2d	45	- (Minus / Dash)
2e	46	. (Dot)
2f	47	/ (Forward Slash)
30	48	0
31	49	1
32	50	2
33	51	3
34	52	4
35	53	5
36	54	6
37	55	7
38	56	8
39	57	9
3a	58	: (Colon)
3b	59	; (Semi-colon)
3c	60	< (Less Than)
3d	61	= (Equal Sign)

Hex	Dec	Char
3e	62	> (Greater Than)
3f	63	? (Question Mark)
40	64	@ (AT Symbol)
41	65	A
42	66	B
43	67	C
44	68	D
45	69	E
46	70	F
47	71	G
48	72	H
49	73	I
4a	74	J
4b	75	K
4c	76	L
4d	77	M
4e	78	N
4f	79	O
50	80	P
51	81	Q
52	82	R
53	83	S
54	84	T
55	85	U
56	86	V
57	87	W
58	88	X
59	89	Y
5a	90	Z
5b	91	[(Left / Opening Bracket)
5c	92	\ (Back Slash)
5d	93] (Right / Closing Bracket)

Hex	Dec	Char
5e	94	^ (Caret / Circumflex)
5f	95	_ (Underscore)
60	96	' (Grave Accent)
61	97	A
62	98	B
63	99	C
64	100	d
65	101	e
66	102	f
67	103	g
68	104	h
69	105	i
6a	106	j
6b	107	k
6c	108	l
6d	109	m
6e	110	n
6f	111	o
70	112	p
71	113	q
72	114	r
73	115	s
74	116	t
75	117	u
76	118	v
77	119	w
78	120	x
79	121	y
7a	122	z
7b	123	{ (Left/ Opening Brace)
7c	124	(Vertical Bar)
7d	125	} (Right/Closing Brace)
7e	126	~ (Tilde)
7f	127	DEL (Delete)

Digit Barcodes

0 ~ 5



D0000000

0



D0000001

1



D0000002

2



D0000003

3



D0000004

4



D0000005

5

6~ 9



D000006

6



D000007

7



D000008

8



D000009

9

A ~ F



D00000A

A



D00000B

B



D00000C

C



D00000D

D



D00000E

E



D00000F

F

Save/Cancel Barcodes

After reading numeric barcode(s), you need to scan the **Save** barcode to save the data. If you scan the wrong digit(s), you can either scan the **Cancel the Last Digit** barcode and then the correct digit, or scan the **Cancel All Digits** barcode and then the digits you want.

For instance, after reading the **Decode Session Timeout** barcode and numeric barcodes “1”, “2” and “3”, you scan:

Cancel the Last Digit: The last digit “3” will be removed.

Cancel All Digits: All digits “123” will be removed.



D 0 0 0 0 1 2

Save



D 0 0 0 0 1 0

Cancel the Last Digit



D 0 0 0 0 1 1

Cancel All Digits

F1~F12

When the USB HID-KBW feature is enabled, scanning one of the following barcodes will send the corresponding function key.

F1~F6



F000000

F1



F000001

F2



F000002

F3



F000003

F4



F000004

F5



F000005

F6

F7~F12



F000006

F7



F000007

F8



F000008

F9



F000009

F10



F00000A

F11



F00000B

F12



Headquarters / 总部

福建新大陆自动识别技术有限公司

地址: 福建省福州市马尾区儒江西路 1 号新大陆科技园

邮编: 350015

电话: +86 - (0) 591-83979222

传真: +86 - (0) 591-83979208

E-mail: marketing@nlscan.com

WEB: www.nlscan.com

Newland Europe BV/ 欧洲新大陆有限公司

Rolweg 25, 4104 AV Culemborg, The Netherlands

TEL: +31 (0) 345 87 00 33

FAX: +31 (0) 345 87 00 39

Email: sales@newland-id.com

WEB: www.newland-id.com

Tech Support: tech-support@newland-id.com

Newland North America Inc. / 北美新大陆有限公司

Address: 46559 Fremont Blvd., Fremont, CA 94538, USA

TEL: 510 490 3888

Fax: 510 490 3887

Email: info@newlandna.com

WEB: www.newlandna.com

Newland Taiwan Inc. / 台湾新大陆资讯科技股份有限公司

7F-6, No. 268, Liancheng Rd., Jhonghe Dist. 235, New Taipei City, Taiwan

新北市 235 中和區連城路 268 號 7 樓之 6 (遠東世紀廣場 J 棟)

TEL: +886 2 7731 5388

FAX: +886 2 7731 5389

Email: sales.tw@newland-id.com

WEB: www.newland-id.com.tw